Concept Pro

H.264

H.264

16 Channel Digital Recording System

VXH264D-16

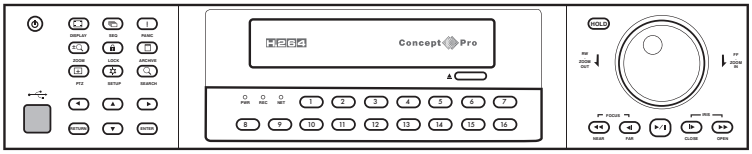

User Manual

CONTENTS

Before installing 1
Key features 2
Front panel description 3
Rear panel description 4
Getting started 5
Connect and switch on 6
Configuring the live display 7
Multi-screen mode 7
Choosing channels 7
Digital zoom 8
Log 8
Playback 9
Search 9
Event Search 11
Search by POS Event 12
Archiving 13
Telemetry Control 15
Key lock function 15
Panic recording 15
Sequence mode 15
Shutdown 15
Quick Menu 16
Configuring the VXH264D – System Setup 17
Camera 17
Audio 18
Colour Setup 18
PTZ Setup 18
Motion Sensor 19
Area Setup 19
Display 21
OSD 21
Monitor 21
Sequence 22
Spot Out 23
POS 24
Sound 24
Audio 24
Buzzer 24
System 25
Date / Time 25
System Management 25
Control Device 26
POS Setup 26
User 27
Management 27
Authority 28
Log-out 28
Network 29
IP Setup 29
DDNS 29
E-mail 29

Event / Sensor 30
HDD Event 30
Alarm Input 30
Alarm Out 30
Buzzer Out 31
Email Noti 31
PTZ Preset 31
Disk Manage 32
Recording 32
Continuous / Motion Setup 33
Size / FPS / Quality 33
Schedule 34
Alarm setup 36
Panic setup 36
Network Streaming 36
Connecting to the VXH264D remotely 37
Connect using Internet Explorer 37
How to connect 37
Remote client controls 39
Using the remote client 40
Live display modes 40
Audio monitoring 40
Audio talkback 40
Saving to AVI file 41
Status 41
Log 41
PTZ 42
Remote client playback controls 43
Controlling playback 44
Audio monitoring 44
Backup 45
Search by event 45
Print an image 45
Remote VXH264D setup 46
Entering setup 46
Loading and saving 46
VXH264D Mobile APP 47
VXH264D Smart Phone Remote Viewing 49
Appendix A: The Archive Set 50
Backup player 50
Controls 51
Appendix B: Configuring a Netgear DG834 router for use with the VXH264D 52
Appendix C: Connecting external devices 55
Appendix D: Specifications 56

BEFORE INSTALLING

- Installation should be carried out only by qualified personnel and in accordance with electrical regulations in force.
- The DVR must be placed on a stable surface or mounted in an approved cabinet. Adequate ventilation must be provided, taking particular care not to block any of the air vents on the DVR.
- Adequate protection against lightning strikes and power surges must be installed to prevent damage to the DVR.
- Any safety warnings on the DVR and in these instructions must be adhered to.
- If cleaning is necessary, shutdown the DVR and disconnect the power source first. Use a soft dry cloth only – never use an abrasive cleaner.
- Do not attempt to service or repair the DVR as opening or removing covers may expose dangerous voltages or other hazards. Refer all servicing to qualified service personnel.

KEY FEATURES

ENHANCED GRAPHICAL USER INTERFACE (GUI)
The VXH264D menu structure and on-screen display is presented in a simple to use and logical GUI format.

ENHANCED RECORDING
Any operation performed on the VXH264D will not affect the recording including local playback, local set-up, multi-user remote viewing and playback, remote setup and archiving.

TWO-WAY AUDIO
4 audio inputs are supported which can be assigned to any video channel. Live and recorded audio can be monitored remotely over the internet and remote audio transmission for PA broadcast on-site is supported. The viewer can hear the audio from the camera they are viewing on full-screen.

REMOTE CONNECTION
Web connection is provided using a standard browser e.g. connection for up to 4 VXH264D units in one session. Depending on the user level, full control of the VXH264D is available over the internet as well as the ability to remotely configure the VXH264D.

The VXH264D allows remote log-on users to see the current status of the recorder by showing:

“C” continuous, “M” Motion, “A” Alarm, “R” Relay out, “P” Panic.

ARCHIVE
Recorded footage (including audio) can be archived to a USB memory stick, CD or DVD. Playback software is embedded with the back-up files and the back-up also contains the system event log and back-up log for full traceability. Save your setup to USB to make future installations even more simple and time efficient.

COMPREHENSIVE RECORDING SETUP
Recording can be scheduled, alarm activated or motion activated. For each type of recording, frame rates, image quality resolution and audio recording properties can be adjusted, per hour, per day and for each individual channel. The VXH264D also has a panic recording feature (from the front panel or external input) which overrides all other recording settings to provide the best quality recording in the event of an emergency.

TELEMETRY CONTROL
Full telemetry control is available from the front panel or remote connection with a wide number of speed dome protocols supported. Protocols can be set individually for each channel and telemetry speed can be adjusted to suit particular speed domes. The telemetry will allow more than one camera to go to a preset from an alarm activation.

EXTENSIVE MONITOR SUPPORT
The VXH264D has 4 main monitor outputs (Composite, VGA, S-Video and HDMI). The VXH264D is provided with 4 spot monitor outputs. Each spot monitor output can be programmed in the VXH264D set-up.

LIVE DISPLAY
The VXH264D displays single or multi-screen images and has several sequence modes (standard and user definable).

CONFIGURATION BACKUP
All configuration settings on the VXH264D can be saved to USB memory stick or a PC file remotely. The saved data can then be uploaded to other VXH264D units allowing rapid deployment where more than one VXH264D is being installed.

EMAIL SUPPORT
The VXH264D can send emails to specific users to notify events such as alarm activation, motion detection, setup changes, hard drive failure.

JOG SHUTTLE
The Jog / Shuttle wheel provides precise playback control on the VXH264D and allows 1x - 64x playback speeds in forward or reverse play and frame by frame advance.

REMOTE USERS IP ADDRESS LOGGED
The IP address of any remote log-on activity can be shown as part of the activity log.

SYSTEM CONTROL KEYS

POWER BUTTON
(page 6 & page 15)

DISPLAY
Selects various display modes in live display and playback (page 7 & page 9)

SEQ
Calls the currently defined sequence mode (page 15)

PANIC
Selects panic recording mode (page 15)

ZOOM
Selects digital zoom mode in live display (page 8)

LOCK
Locks the front panel buttons (page 15)

ARCHIVE
Displays the archive menu (page 13)

PTZ
Selects PTZ mode in live display (page 15)

SETUP
Displays the setup menus (page 17)

SEARCH
Displays the search menu (page 9)

SHUTTLE WHEEL
Used to quickly adjust playback speed and direction (page 10). It is used to control camera zoom when in PTZ mode (page 15), and digital zoom level in live display (page 8)

JOG RING
When playback is paused, the jog ring is used to move footage forwards or backwards, frame by frame (page 10)

HOLD
Locks the current function of the SHUTTLE WHEEL so it can be released (page 10)

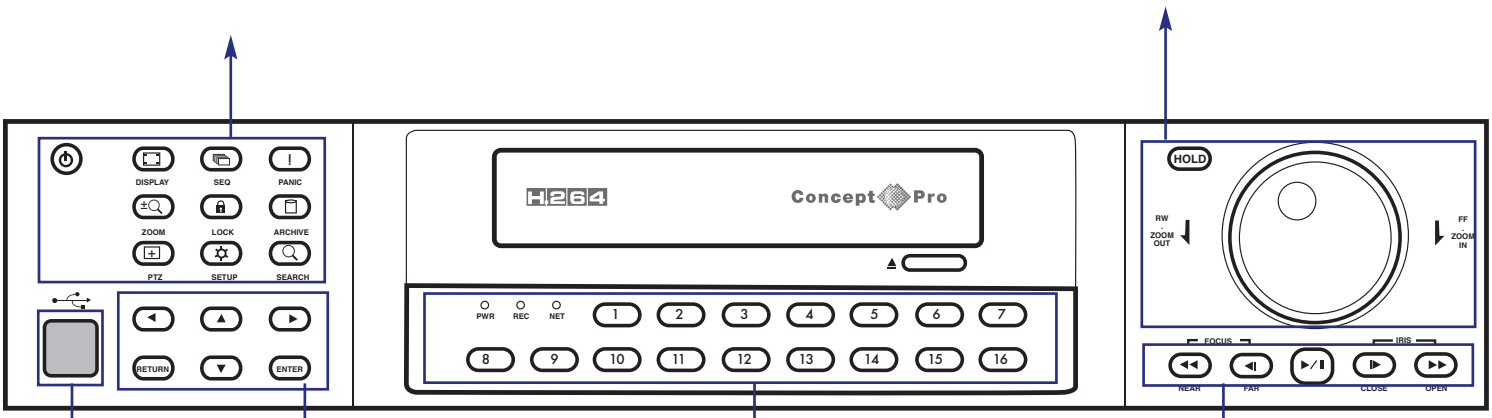

USB ports
Supports a wide variety of USB memory stick for archive, system setting backup and firmware upgrade. An additional USB port is also provided on the rear panel

CURSOR KEYS, ENTER and RETURN buttons
Used for navigating setup menus, search and archive screens. Also used when the VXH264D is in PTZ mode (page 15)

CHANNEL SELECTION BUTTONS
Used to display individual channels in live display and playback (page 7 & page 9) Also used to enter numeric passwords for the various login screens

◀◀ Increases reverse playback speed

◀❙ Selects reverse playback

❙❙ Pauses / resumes playback

❙▶ Selects forward playback and also accesses the instant playback feature

▶▶ Increases forward playback speed

CAMERA INPUTS and LOOP OUTPUTS
Connect up to 16 camera inputs

Loop outputs can be used for connection to other equipment

PANIC / RESET
Panic Button & Alarm Reset

RELAY OUT
Up to 4 NO - NC zero voltage connecions can be made

COMPOSITE AND S-VIDEO MAIN MONITOR CONNECTIONS
Monitor Outputs to connect o a monitor. Both the COMPOSITE and S-VIDEO outputs can be used simultaneously

SPOT MONITOR OUTPUTS
Up to 4 spot monitors can be connected as necessary

RS485
Connection to external telemetry devices

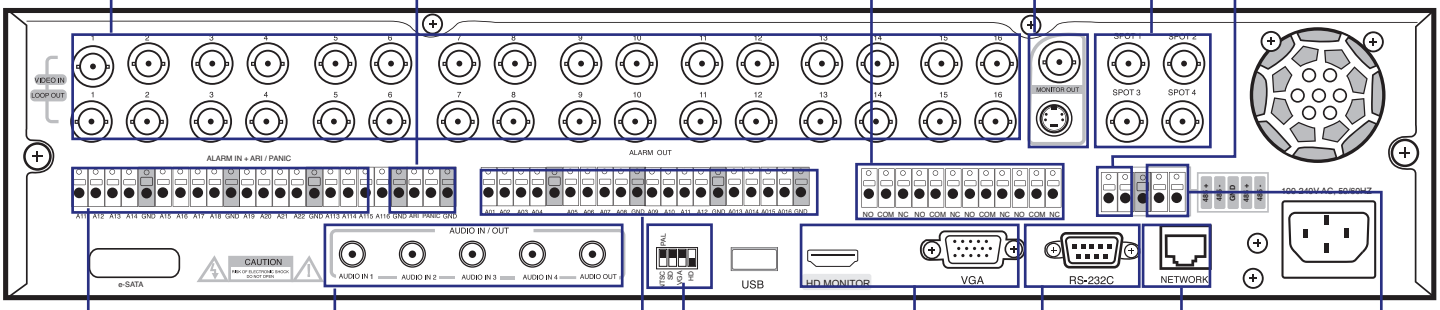

ALARM INPUTS
Up to 16 alarm inputs can be connected and configured as high or low inputs with common ground

AUDIO INPUTS & OUTPUTS
Up to 4 audio inputs and one audio output can be connected as necessary

ALARM OUTPUTS
Up to 16 alarm outputs can be connected and configured as high or low outputs with common ground

DIP SWITCH
Select the monitor output by changing the DIP SWITCHES. Please note: This will only take effect when the DVR is rebooted.

HDMI / VGA
HDMI/VGA main monitor connection to a PC monitor or HDMI screen.

SERIAL PORT
RS232 Serial Port is not used. It is for factory use only

LAN
LAN connection to a router or internal network

POS
Connection to external Till System

PLEASE NOTE: ALL NECESSARY CONNECTIONS MUST BE MADE BEFORE APPLYING POWER TO THE VXH264D!
THE VXH264D IS PRE-CONFIGURED WITH THE FOLLOWING SETTINGS:

25FPS continuous recording rate per channel at D1 (704 x 576) resolution and standard image quality.

- Time and date set to correct local time
- Audio inputs 1-4 assigned to video channels 1-4 respectively
- Telemetry devices set to PELCO-D, 2400 Baud
- Based on average image recording, the above settings will provide around 11 days recording on a 2Tb drive before the footage starts to be overwritten.

Please note your VXH264D can be controlled via the front panel buttons, IR remote control or a USB mouse. When a USB mouse is installed an on-screen pointer will appear. This can be used to navigate the system.

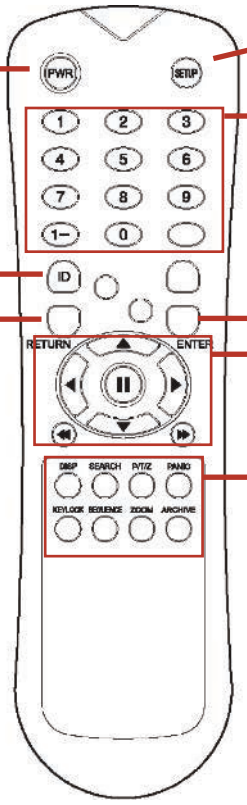

POWER
System ON/OFF

ID BUTTON
Select DVR ID

RETURN
Cancel / Deselect
Previous Screen

SETUP: Open system setup menu

Channel Selection buttons

ENTER: Apply / Select / Go to next screen

NAVIGATION BUTTONS: Used for Playback Control, Menu Naviagtion, and PTZ/Focus Control

DISP: Change display screen

SEARCH: Go to search mode

PTZ: Go to PTZ menu

PANIC: Record by panic setting

KEYLOCK: Lock the keys (Remote / Front)

SEQUENCE: Change to sequence screen

ZOOM: Go to zoom mode

ARCHIVE: Go to back-up menu

* If there are multiple DVRs used in a system, each DVR can be set with a different ID. The remote controller sets each ID per DVR. This allows all the DVRs to be controlled with one remote controller by selecting the appropriate ID.

HOW TO SET THE ID ON THE REMOTE CONTROLLER
Program each DVR accordingly to system ID (see page 26)
Press the **ID** button, this will display "**INPUT ID**" on screen.
Using the channel selection buttons, input the system ID, press "**ENTER**" then the "**RETURN**" button

To reset the ID to factory default, press the ID button and input ID 255 and press the "**ENTER**" button followed by pressing the "**RETURN**" button.

CONNECT AND SWITCH ON

- Connect up to 16 CAMERA INPUTS. The VXH264D also has LOOP OUTPUTS so that any signals can be fed to other equipment if required. Termination is automatically set by the VXH264D depending on connection type
- Using the Dip Switches on the back of the VXH264D, select the monitor out you are connneting

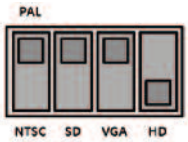

To select the HDMI monitor output

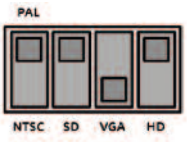

To select the VGA monitor output

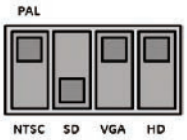

To select the Standard definition output

Please note when HDMI or VGA outputs are selected only the selected monitor type can be viewed, if standard definition output is selected both Composite and S-Video can be viewed simultaneously.Only once the DVR has been rebooted will the dip switch settings have affect.

- Connect one or more monitors to the VXH264D using the COMPOSITE, VGA, S-VIDEO OR HDMI connections
- Connect power to the VXH264D. The VXH264D checks for proper power connection and emits a beep. Press the POWER BUTTON on the front panel of the VXH264D to begin operation.

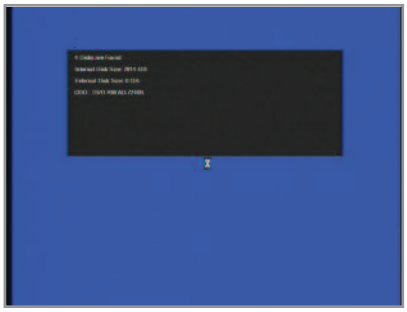

The VXH264D startup screen detects and checks the status of hard drives and the CDRW / DVR-RW drive

After startup diagnostics are complete, the operator must log-on to the system. The default user name is 'ADMIN'. Using the **CHANNEL SELECTION** buttons, key in the default password of '1234' and press the **ENTER** button

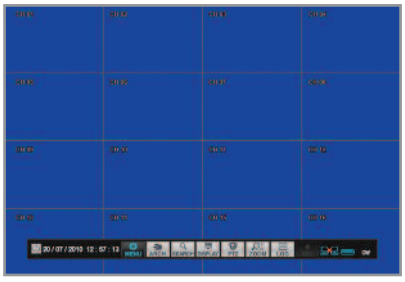

The VXH264D begins normal operation and shows the default display of all 16 channels.
The status bar at the bottom of the screen shows current time and date. The status bar includes Menu, Archive, Search, Display, PTZ & Zoom control along with the 'Log'.

A title for each channel is shown

The red square and letter 'C' in the top right of each channel display shows that the channel is recording in Timer / Schedule mode.

If audio recording is enabled, an audio icon showing 1,2,3 or 4 is displayed.

MULTI SCREEN MODE

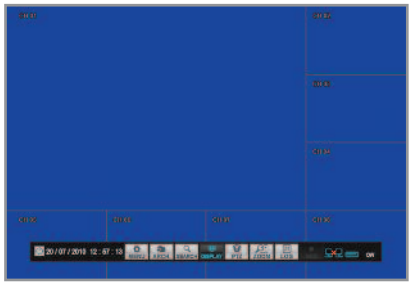

6 different display modes are supported by the 16 channel VXH264D.
By repeatedly pressing the **DISPLAY** button, the operator can choose between single, 4, 6, 8, 9, and 16 screen as well as basic sequence modes.

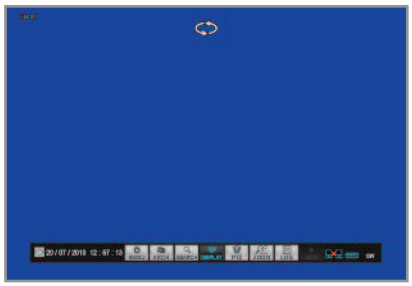

All the display modes are static with the exception of the sequence mode. In this mode, the sequence symbol ( ) is displayed and each channel is shown in full screen for a set period of time (default 5 seconds) before switching to the next channel. The sequence runs indefinitely until a different display mode is chosen.

CHOOSING CHANNELS

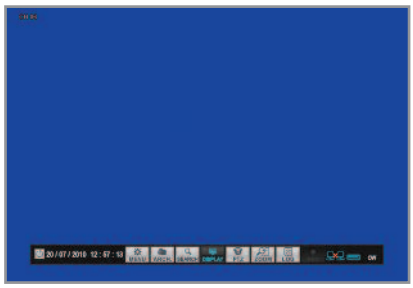

To view a particular channel in full screen, press the corresponding **CHANNEL SELECTION** button.

Pressing the same **CHANNEL SELECTION** button again will switch the display back to the last selected multi screen mode.

If audio recording is enabled for a selected channel, the chosen audio source is automatically played when that channel is viewed in full screen.

DIGITAL ZOOM

When viewing a channel in full screen, the operator can zoom in to a particular area by up to 14 times. To use digital zoom, select the required channel and press the **ZOOM** button. The small window at the bottom right of the screen shows the full image whilst the main display area shows the zoomed portion.

To adjust the zoom level, turn the **SHUTTLE WHEEL** clockwise to increase zoom or anti-clockwise to decrease zoom.
To move the zoom area around the image, use the **CURSOR KEYS** to adjust the position of the zoom square.

Press the **RETURN** button to return to normal live display mode.

LOG

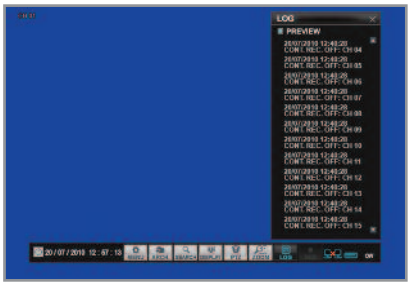

After selecting the

symbol the event log is shown on the display.

SEARCH

To search for a particular section of recorded footage, press the **SEARCH** button.

To protect unauthorised viewing of footage, only authorised users can playback footage.

To log-in as ADMIN, enter the default password of 1234 and press **ENTER**

The VXH264D uses a calendar and timeline search method for quick access to recorded footage.
The calendar displayed on the left shows the current month. The days highlighted in blue contain recorded footage.

The timeline on the right shows a 24 hour status of all channels for the selected day.

The recorded timeline will be displayed with different colours.

Timer = Sky blue
Motion = Green
Alarm = Red
Panic = White

Press **ENTER** to select the calendar and use the **CURSOR KEYS** to move to the required day. As different days are selected, the timeline display also changes to show recorded footage on that day.

Press **ENTER** to choose the day and to move to the timeline.

Use the **CURSOR KEYS** to move the timeline cursor left or right to select the time segment required.
Each movement of the timeline cursor increases or decreases the time by 10 minutes. The currently selected time is displayed underneath the calendar.

Press **PLAY** to begin playback from the selected time.

The default playback mode is 16 screen display. By pressing **DISPLAY** or using the **CHANNEL SELECTION** buttons, it is possible to display single screen or other multi screen formats in a similar way to the live display mode. When viewing playback in single screen mode, any associated audio recorded with that channel can be heard.

SEARCH continued

During playback, turning the **SHUTTLE WHEEL** steadily clockwise increases the playback speed by up to 64 times. Turning steadily anticlockwise will reverse play by up to 64 times. When the **SHUTTLE WHEEL** is released, playback is paused.

If the **HOLD** button is pressed and released during **SHUTTLE WHEEL** operation, the last shuttle function is held, even if the wheel is released
When playback is paused, the **JOG RING** can be used to accurately move the footage forward or backwards, frame by frame.

The playback speed and direction can also be controlled using the five playback buttons located under the jog wheel.

To exit the playback mode and return to the search screen to choose another time and date, press **RETURN**.

To exit the search screen and go back to the last selected live view, repeatedly press **RETURN**.

EVENT SEARCH

The VXH264D event log stores events such as motion and alarm activated recording and video loss.

To search for an event and playback the recorded footage, press the **SEARCH** button and log in as ADMIN with the default password of 1234 / or authorised user.

To display the event log screen, press the right **CURSOR KEY** to select SEARCH BY EVENT and press **ENTER**. Various filters can be used to limit the number of events displayed. Using the **CURSOR KEYS** and **ENTER** button, select the FROM and TO date / time and the events and channels required.

Highlight SEARCH and press **ENTER** to display the event log for the criteria selected.

To playback footage for a particular event, select the event from the list using the **CURSOR KEYS** and press **ENTER.**

Playback resumes from the moment the selected event occurred and continues until stopped by the operator.

During event search playback, the **SHUTTLE WHEEL, JOG RING** and playback buttons can be used as normal.

To stop playback and return to the live view mode, repeatedly press **RETURN.**

Note: The event log search contains the following selectable entries:

- **ALL: Select all of the above**
- **SET-UP: All set-up changes are shown**
- **MOTION: All motion detection events are displayed for the chosen date range**
- **HDD: Displays HDD errors**
- **SYSTEM: All system events are displayed (Such as Log-on/off, Remote Connects, Boot/System Start**
- **ALARM: All alarm input events are displayed for the chosen date range**
- **VIDEO LOSS: Displays any video loss & channel number**
- **RECORD: All recording operations are displayed for the chosen date range**

SEARCH BY POS EVENT

On the Search by POS Event, you can search for event information such as price, quantity, item keyword, date etc.

To search for information select **SEARCH BY POS EVENT** from the search menu.

Enter the desired information such as the channel you are searching, the condition i.e. price / quantity etc, using the arrow keys to navigate around the menu, or using a mouse then click **SEARCH.**

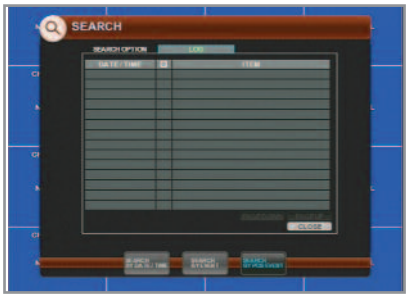

The event log will then show a list of events for the search you have just entered.
To playback footage for a particular event, select the event from the list using the **CURSOR KEYS** and press **ENTER**.

Playback resumes from the moment when the selected event occurred and continues until stopped by the operator.

During event search playback, the playback buttons can be used as normal.

To stop playback and return to live view mode, repeatedly press **RETURN.**

To archive recorded footage to USB memory stick, CD or FTP Site, press the **ARCHIVE** button.

To protect unauthorised viewing and distribution of footage, only the authorised user or ADMIN user can archive footage.

To login as ADMIN, enter the default password of 1234 and press **ENTER.**

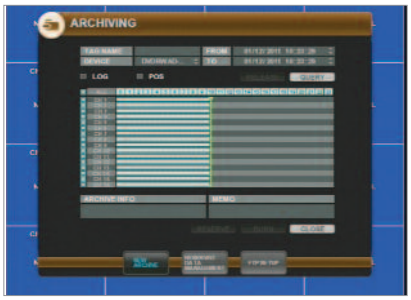

The Archiving screen allows the operator to choose exactly what to back-up and to which storage device.
Use the **CURSOR KEYS** to navigate around the Archiving screen. To change any value or setting:
Press **ENTER** to change the blue cursor to yellow.

Use the up and down **CURSOR KEYS** to change the value

Press **ENTER** to accept the value or RETURN to cancel

To change a tick box setting, press **ENTER** to toggle on or off

SELECT DEVICE: Choose between DVD-RW or USB / FTP back-up device
FROM / TO: Start and end time to back-up
TAG NAME: The name of the archive set
LOG: When selected, the event log for the particular archive time period is included

Once all the desired archive options have been selected, highlight the QUERY button and press **ENTER**. The VXH264D displays the total archive size.

If the ORIGINAL SIZE is larger than the available space on the backup media, the unit will prompt the user to insert another DVD / USB to finish the archive process.

Press **BURN** to continue the archive process
Press **RESERVE** to reserve the data for future archiving

A small window opens showing:
TAG NAME: The name of the Archive
DEVICE: Choose between DVD, USB or FTP.

BURNING TYPE: Choose between BURNING or ERASE & BURN.
Press START to begin the archive process.

The footage is extracted to a temporary area on the hard drive.

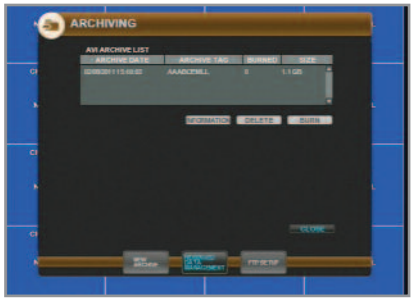

Once extracted, the footage is copied to DVD, USB or FTP.
Note that depending on the amount of footage selected for archive, the extracting and burning process may take some time, during which the VXH264D cannot be used. Normal recording is unaffected by the archive process.

RESERVED DATA MANAGEMENT: This will display only recorded footage that has been reserved.

Selected footage can be deleted, burn or information viewed.

For further details on archiving, see Appendix A on page 50.

To Archive footage directly to an FTP Site from the DVR fill in the following information:

HOST NAME

PORT

USERNAME

PASSWORD

And the **DIRECTORY** folder – this is the folder on the FTP site where the archived footage will be sent.

FTP Archiving is possible on a new archive or an archive been reserved in the **Reserved Data Management.**

TELEMETRY CONTROL

Speed domes and other telemetry devices connected to the VXH264D, can be fully controlled from the front panel or Remote Control.

In live display mode, press the **PTZ** button.

To select a camera to control, use the **CHANNEL SELECTION** buttons.

When **PASSWORD** is set to ON only authorised users or ADMIN users can control the PTZ.

Pan and tilt movement is controlled by the **CURSOR KEYS**. Zoom is controlled by turning the **SHUTTLE WHEEL**.

◀◀ & ◀ controls focus, ▶ & ▶▶ controls the iris.

Press **PANIC** or **ARCHIVE** buttons to decrease or increase the preset number.

Press **PAUSE** to program the preset, or **ENTER** to call an existing preset.

Press **RETURN** to exit PTZ mode and return to live view.

KEY LOCK FUNCTION

An operator with ADMIN rights can choose to lock the VXH264D front panel to prevent any unauthorised control.
Press the **LOCK** button, enter the default password '1234' and press **ENTER**. All buttons are now disabled. To unlock, press any button and enter the default password '1234'.

PANIC RECORDING

Panic recording will override all standard recording settings, PANIC record settings are configured in the recording set-up. (Page 36)
Press the **PANIC** button. The top right of the display shows a red P to indicate that the VXH264D is in panic recording mode. Press the **PANIC** button again to return to normal recording mode.

SEQUENCE

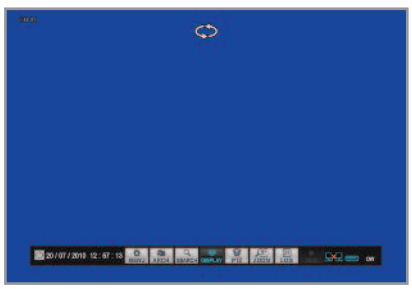

Press the **SEQ** button. Each channel is shown in full screen for a set period of time (default 5 seconds) before switching to the next channel. To stop the sequence on a particular channel, press the **SEQ** button again.
More complex sequences can be programmed through the setup menu. (Page 22)

SHUT DOWN

Only an operator with ADMIN rights can shut down the VXH264D. Press the **POWER** button, use the cursor key to select **POWER OFF** then **ENTER** key. You can then enter the default password '1234' and press **ENTER**.

The VXH264D shuts down and emits two beeps to indicate that power can be safely removed.

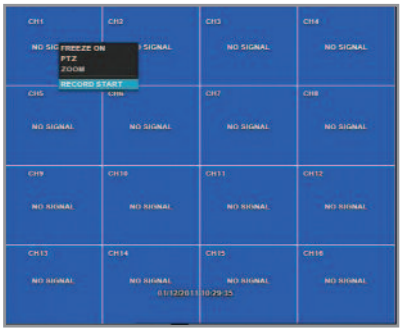

If you are using the USB mouse to control the VXH264D pressing the right hand mouse will bring up the Quick Menu.

FREEZE: Selecting FREEZE ON will freeze the live view picture for the selected channel. To go back to live view select FREEZE OFF.

PTZ: Selecting PTZ will bring up the PTZ control screen. PTZ can only be controlled by an authorised user.

ZOOM: Selecting ZOOM will bring up the digital zoom control.

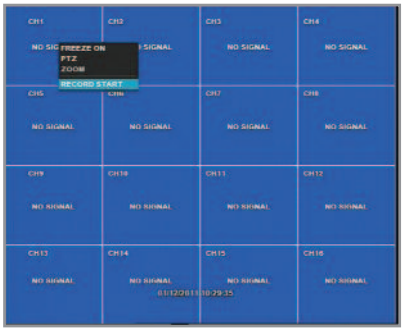

RECORD START: Starts the panic record mode. Use the right mouse click to select. RECORD STOP to stop the panic record mode.

Press the **SETUP** button to bring up the SYSTEM / RECORD setup option on screen. (If the status bar is not visible you will need to press the setup button twice). Use the **CURSOR KEYS** to select SYSTEM SETUP and press **ENTER**.

Only authorised users or ADMIN users can configure the VXH264D. Enter the default password of '1234'.

To navigate around any items in the setup menu, use the **CURSOR KEYS** and the **ENTER** and **RETURN** buttons. In general, the **ENTER** button is used to select and change a particular item and the **RETURN** button is used to cancel a change or exit from a particular setup screen.

CONFIGURING THE VXH264D
CAMERA

To set-up the various camera options, highlight CAMERA and press **ENTER.**

CAMERA: CAMERA TITLE

TITLE: For each camera, a title of up to 8 characters can be set using the virtual keyboard.

COVERT: When set to ON, the camera image is not displayed in live display but continues to be recorded.

The covert cameras can be viewed in playback providing the user has correct authority

CAMERA: CAMERA AUDIO

If audio devices are connected to the VXH264D, any audio channel can be assigned to any video channels.

CAMERA: COLOUR SETUP

Brightness, contrast, tint and colour can be adjusted for each individual channel. Highlight which channel to modify and press **ENTER.**

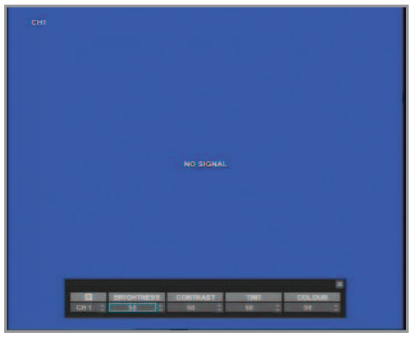

The selected channel is displayed in full screen.

BRIGHTNESS, CONTRAST, TINT and COLOUR can be changed as necessary.

To modify a different channel, highlight CAMERA and choose the desired channel.

Press **RETURN** when all changes are complete.

CAMERA: PTZ SETUP

ADDRESS: The unique ID of the PTZ device.

PROTOCOL: The protocol of the PTZ device.

BAUD RATE: The baud rate of the PTZ device.

PTZ properties can also be adjusted for each channel by selecting the DETAIL and pressing **ENTER**.

Note that some settings, such as AUTO FOCUS. May not be compatible with particular PTZ equipment. If this is the case, changing this value will have no effect on PTZ control.

CAMERA: PTZ SETUP CONTINUED

To set up a Tour, using the cursor keys select **TOUR** and press **ENTER**.
A setup screen will then appear allowing the operator to configure which presets the PTZ camera will go to after a set dwell time.
To enable the tour, set the **MODE** to **AUTO**, and then configure the **PRESET NO**. to the presets you have defined.
When you have finished the configuration, press **OK** to come out of the setup, and then APPLY.
The Tour will start immediately.

CAMERA: MOTION SENSOR

SENSITIVITY: Between 1 (Lowest) and 10 (Highest) determines the degree of motion required before recording is activated.

AREA SETUP

AREA SETUP: Choosing this option allows the operator to define which areas of the image are monitored for motion detection.

Black grid squares represent detection areas, blank areas are ignored. The default is that motion will be detected across the entire image.

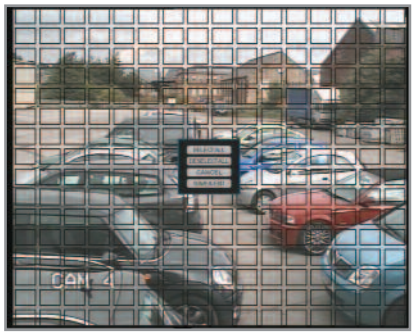

To quickly select or deselect the entire grid, press **RETURN** to bring up the motion menu.

Highlight SELECT ALL or DESELECT ALL as appropriate and press **ENTER.**

To select or deselect specific areas, press **ENTER** to bring up the yellow cursor square in the top left of the display.

Move the cursor using the **CURSOR KEYS** to the first corner of the area to be set and press **ENTER** – The grid square retains the yellow cursor square.

Use the **CURSOR KEYS** to increase the size of the motion cursor as required.

Press **ENTER** to change from selected to deselected (or vice versa). Repeat the above sequence as necessary to mask-off or include other areas of the image.

Once the detection area has been defined, press **RETURN** and choose SAVE & EXIT to save the area and return to the motion setup menu.

Please note: a motion detection recording schedule must be defined in the RECORD MENU described on page 34 & 35.

To set-up the various display options, highlight DISPLAY and press **ENTER.**

DISPLAY: OSD

STATUS BAR: Turns the status bar at the bottom of the live display ALWAYS ON or auto off delay time.

DATE & TIME: Determines whether the Date and Time is shown when the staus bar is removed / timed out.

CAMERA TITLE: Determines whether the camera title is displayed.

RECORDING MODE ICON: Determines whether the VXH264D recording status is shown at the top right of each channel display window.

BORDER: Determines whether there is a border around each channel in multi screen display mode.

BORDER COLOUR: If the border is ON, the operator can choose the colour.

MOTION SENSOR DISPLAY: If false motion recording is occurring, the operator can use this feature to determine and rectify the cause in realtime.

OFF – Normal display mode.
ON – Areas where motion is detected are highlighted with coloured blocks.

MOTION COLOUR: The colour of the blocks displayed when MOTION SENSOR DISPLAY is set to ON.

LANGUAGE: Select the language of display.

To change any of these settings, highlight OSD and press **ENTER** to select. Use the **CURSOR KEYS** to navigate to the option required. Press **ENTER** to select the option (the cursor changes to yellow) and use the **CURSOR KEYS** to change the setting. Press **ENTER** to save the setting or **RETURN** to cancel.

DISPLAY: MONITOR

SEQUENCE DWELL: The time that each screen is displayed in a sequence operation.

SPOT SEQUENCE DWELL: The time that each screen is displayed on the spot monitor outputs.

DE-INTERLACE MODE: When recording any channels in D1 resolution (704 x 576) this should be set to ON to prevent judder during playback.

ALARM POP-UP MODE: When set to ON, an alarm input will cause the associated channel to display full screen.

ALARM POP-UP DWELL: Determines how long the full screen pop-up is displayed after an alarm input. If the alarm condition continues, the popup screen is displayed constantl .

MOTION POP-UP MODE: When set to ON, motion detection will cause the associated channel to display full screen.

MOTION POP-UP DWELL: Determines how long the full screen pop-up is displayed after motion detection. If motion continues, the popup screen is displayed constantly.

To change any of these settings, highlight MONITOR and press **ENTER** to select. Use the **CURSOR KEYS** to navigate to the option required. Press **ENTER** to select the option (the cursor changes to yellow) and use the **CURSOR KEYS** to change the setting. Press **ENTER** to save the setting or **RETURN** to cancel.

DISPLAY: SEQUENCE

When the **SEQ** button is pressed, the default sequence will cycle through all 16 channels, one by one.

Sequence setup allows the operator to define a custom sequence using mixed multi screen views and any desired channels.

To add a new sequence, highlight ADD and press **ENTER**.

Sequence title is highlighted – press **ENTER** to bring up the virtual keyboard and key in a name or reference number for the new sequence.

Move around the virtual keyboard using the **CURSOR KEYS** and **ENTER** to select a character.

To delete a character, use ←.

To change keyboard case and use the A/a located on the bottom right of the virtual keyboard.

To exit, press **RETURN**.

Set SCHEDULE to ON, highlight SAVE and press **ENTER** to display the sequence programming screen.

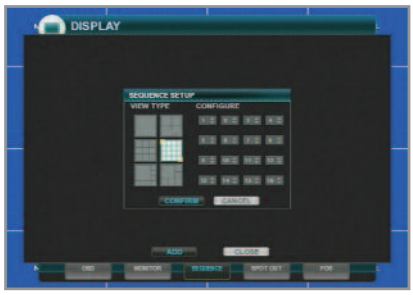

Press ADD to show the SEQUENCE SET-UP SYSTEM screen. This represents the first sequence screen that will be displayed. Select the VIEW TYPE (Single or various multi-view) and press **ENTER.**

When the correct screen type is displayed use the **CURSOR KEYS** to configure the channels required for each portion of the multi-screen.

Note: Only one instance of each channel can be displayed.

DISPLAY: SEQUENCE continued

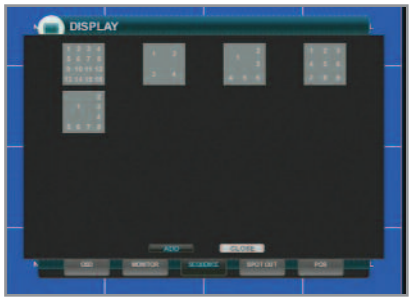

When all the channels have been completed, press **CONFIRM** to save the sequence screen and begin creating the next one.

Up to 16 different sequence screens can be created.

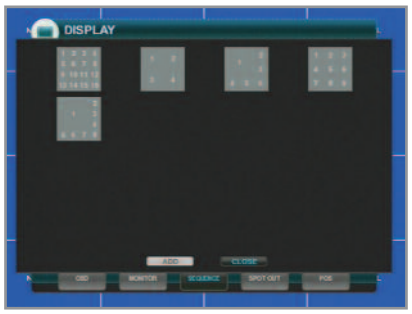

To finish editing the sequence, press **CLOSE** and then **APPLY** to save & exit.

The new sequence is now saved and can be started by pressing the **SEQ** button when in live view.

DISPLAY: SPOT-OUT

The VXH264D has 4 **SPOT MONITOR OUTPUTS**. Each one displays a full screen sequence of particular channels, depending on the settings configured in this menu.
For each spot monitor, the operator can decide which channels are displayed.
For example, spot 1 could display channels 1-4, spot 2 could display channels 5-8 and so on.

To change the behaviour of the spot monitor outputs, first choose the spot CHANNEL to modify, and then use the **CURSOR KEYS** and **ENTER**. To bring up the EDIT menu use the **CURSOR KEYS** to modify the TITLE, SCHEDULE, ON/OFF.

Press **ENTER** when selecting SPOT TITLE the virtual keyboard is displayed.

Use the **CURSOR KEYS** to select MODIFY and then **ENTER**. A new configuration screen appears.

Use the **CURSOR KEYS** to select ADD then **ENTER** to display SPOT SEQUENCE SET-UP.

Use the UP **CURSOR KEYS** to select the single view.

Use the RIGHT HAND **CURSOR KEY** to highlight the channel option (blue border). Press **ENTER** (yellow border).

Use the UP/DOWN **CURSOR KEYS** to select the channel number to be viewed and press **ENTER** (blue border). Use the **CURSOR KEYS** to select CONFIRM or CANCEL. Press **ENTER**.

Press **RETURN** then press **APPLY** to save settings.

Under this section you configure how the text is shown for the POS.

DISPLAY MODE	OFF / LIVE / PLAYBACK / BOTH
POSTION	CENTRE / LEFT / RIGHT
FONT SIZE	SMALL / MEDIUM / LARGE
NORMAL COLOUR	WHITE / GREY / YELLOW / BLUE / GREEN / RED
HIGHLIGHT COLOUR	WHITE / GREY / YELLOW / BLUE / GREEN / RED
DWELL TIME	1 ~ 60 SEC / UNTIL KEY
SCROLL	CLEAR / ROLL UP
HIGHLIGHT	ON / OFF
TEXT 1 ~ 4	[ENTER TEXT]
EXCLUDE	ON / OFF
TEXT 1 ~ 4	[ENTER TEXT]

To set-up the various sound options, highlight SOUND and press **ENTER**.

SOUND: AUDIO

LIVE AUDIO: When set to ON, the selected audio channel can be monitored on the AUDIO OUTPUT when the VXH264D is in any multi screen mode.

DEFAULT AUDIO CHANNEL: Specify which one of the 4 AUDIO INPUTS is routed to the AUDIO OUTPUT when the VXH264D is in any multi screen mode.

NETWORK AUDIO TRANSMIT: When set to ON, live and playback audio is transmitted to a remote PC connection.

NETWORK AUDIO RECEIVE: When set to ON, allows a remote PC connection to send audio back to the VXH264D.

SOUND: BUZZER

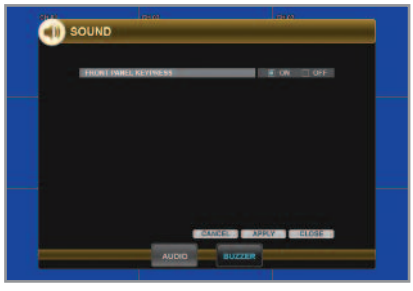

FRONT PANEL KEYPRESS: When set to ON, each front panel button press is confirmed by a beep

This setting will also turn the IR Remote confirmation beep on or off .

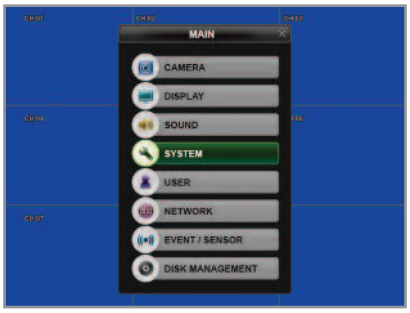

To set-up the various system options, highlight SYSTEM and press **ENTER**

SYSTEM: DATE/TIME

DATE TIME: Allows the operator to set or modify the current date & time.

DATE FORMAT: Determines how the date is displayed.

TIME FORMAT: Determines how the time is displayed.

NETWORK TIME SERVER SETUP: If the VXH264D is connected to the Internet, the time and date can be accurately set by selecting SYNC and pressing **ENTER**.

TIME ZONE SETUP: Should be set according to the region that the VXH264D is used in.

D.S.T.: When set to ON, the VXH264D will automatically adjust the time by one hour on the relevant date in spring and autumn.

SYSTEM: SYSTEM MANAGEMENT

Select INFO to display

F/W VERSION: Shows the firmware version of the VXH264D.

H/W VERSION: Shows the hardware version of the VXH264D.

VIDEO SIGNAL TYPE: The VXH264D can be selected between PAL and NTSC via a selector switch on the rear panel (Default PAL).

DISK CAPACITY: Shows the total hard drive capacity installed.

IP ADDRESS: Shows either the manual IP address entered in NETWORK setup or the IP address assigned by a DHCP server if enabled.

MAC ADDRESS: Shows the MAC (Media Access Control) address of the VXH264D. It is unique – no other network device has this MAC address.

DDNS DOMAIN NAME: If DDNS is enabled, the host DDNS server is specified here.

RTSP SERVICE PORT: The port number the DVR uses for internal networks.

WEB SERVER PORT: The port number that the DVR uses to support remote I.E conections.

Note this is for information only not for the setup.

SYSTEM NAME: A system name of up to 15 characters can be defined. It is used so that notification emails can be identified.

F/W UPGRADE: Firmware updates may be released periodically to enhance system performance and add extra features. The operator can upgrade the firmware using a USB memory stick.

FACTORY DEFAULT: If settings have been changed which causes erratic behaviour, the factory default settings can be loaded.

SYSTEM DATA: System settings can be saved to a USB memory stick. The settings can be reloaded in case of accidental factory reset or can be transferred to another VXH264D if multiple units need to be installed with the same settings. All information is saved including network settings and system name.

PASSWORD: Selects if a password is required 'ON / OFF'.
Please note: Password must be selected to 'ON' if USER MANGEMENT options are required.

PANEL LED: Select to turn 'ON/OFF' the LEDs on the front panel.

SYSTEM: CONTROL DEVICE

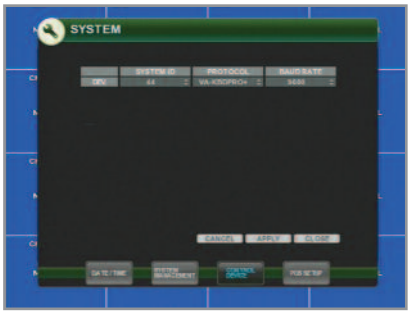

The VXH264D can be remotely controlled using a Concept Pro VA-KBDPRO+ keyboard. Up to 254 VXH264Ds can be controlled using a single VA-KBDPRO+ PTZ controller.

SYSTEM ID: If more than one VXH264D is connected on the same RS485 bus, each one must have a unique ID.

PROTOCOL: Must be set to VA-KBDPRO+.

BAUD RATE: Must be set to match the baud rate of the VA-KBDPRO+ PTZ controller.

SYSTEM: POS SETUP

The VXH264D can be linked in to a till system to allow this, set up the configuration on this menu – POS SETUP

POS ENABLE	ON / OFF
PROTOCOL	RS485 (1CH) / RS485 (AVE) / NET (TCP
BAUDRATE	9600
TCP PORT	[PORT NUMBER]
ALARM TRIGGER	OFF / ALWAYS / TEXT
TRIGGER TEXT 1	[ENTER TEXT]
TRIGGER TEXT 2	[ENTER TEXT]
TRIGGER TEXT 3	[ENTER TEXT]
TRIGGER TEXT 4	[ENTER TEXT]
TRIGGER TEXT 5	[ENTER TEXT]
PROTOCOL RS485 (1CH)	
CHANNEL	1 ~ 16
PROTOCOL RS485 (AVE)	1 ~ 16
CHANNEL	[ENTER PORT]
ADDR / PORT	
PROTOCOL NET (TCP)	1 ~ 16
CHANNEL ADDR / PORT	[PORT DISPLAYED DEPENDING ON TCP PORT SET PREVIOUSLY]

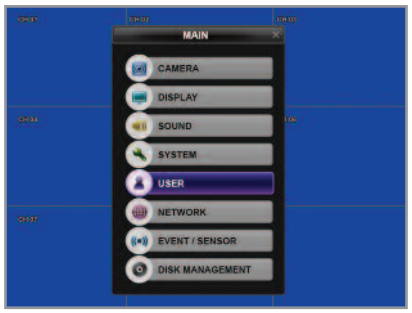

To set-up User Management options, highlight USER and press **ENTER**.

USER: USER MANAGEMENT

By default the VXH264D is configured with a USER ID of ADMIN belonging to the ADMIN group and with a password of 1234.

As well as the ability to add new users, existing users defaults can be modified.

The maximum number of users that can be created is 8.

To modify user details, highlight the user with the blue cursor or press **ENTER**. The EDIT screen appears.

USER ID: Edit the user ID using the virtual keyboard. (Max 10 characters).

PASSWORD: Change the password using the virtual keyboard. (Max 8 characters)
Please note: To delete the existing password use the ← on the virtual keyboard.

GROUP: Users can be assigned by one of three groups. ADMIN, MANAGER, USER.

E-MAIL: Enter the user's email address if email notifications are required.

E-MAIL NOTI: Enable or disable email notification for the particular user.

MAIN SERVER: Select which SMTP Mail Sever you are assigning to this user.

PLEASE NOTE: For security reason, it is recommended that the ADMIN user password is changed as soon as possible.

To add users: Highlight ADD or press ENTER. The new user can be added using the steps outlined above.

USER: USER AUTHORITY

User authority (except ADMIN) can be selected.

Using the **CURSOR KEYS** select the functions you want and the MANAGER and USER groups to have. (Blue square = On)

Press **APPLY** to save settings.

PLEASE NOTE: Any user can be deleted except the default ADMIN user.

USER: LOG OUT

AUTO LOGOUT: Selects if auto log-out is ON or OFF.

DURATION: If auto log is set to ON this determines the time. (in 1 - 10 Min)

Press **APPLY** to save settings.

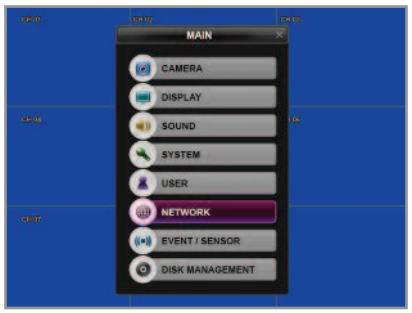

To set-up Network options hightlight NETWORK and press **ENTER**.

NETWORK: IP SETUP

Please note: for further information on network settings and remote connections please refer to pages 52 - 54.

DHCP: When selected the DVR will obtain an IP address automatically if connected to a DHCP server or router.

IP ADDRESS: If DHCP is not being used the IP address can be manually set.

GATEWAY: If DHCP is not being used the Gateway IP address can be manually set.

SUBNET MASK: If DHCP is not being used the subnet mask can be set manually.

1ST DNS SERVER: If DHCP is not being used the 1st DNS server can be manually set.

2ND DNS SERVER: If DHCP is not being used the 2nd DNS server can be manually set.

RTSP PORT: The port number that the VXH264D uses to support video streaming to the remote browser.

WEB SERVER PORT: The port number that the VXH264D uses to support remote connection from Internet Explorer.

MAX TX SPEED: Specifies the maximum bandwidth that the VXH264D can use during a remote connection.

Please Note: Both RTSP & WEB SERVER PORT will need a firewall rule creating for remote connection.

NETWORK: DDNS

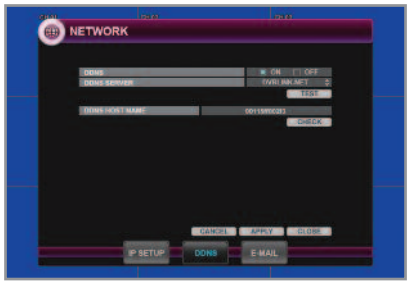

DDNS: When enabled the VXH264D can be accessed through a dynamic DNS server. Commonly used if a broadband connection does not have a static IP address.

Press **APPLY** to save settings.

The Default DDNS host name is selected as the MAC address of the DVR. If the user wishes to select their own host name (eg myhome) enter the name in the field “DDNS HOST NAME” and press “CHECK” to see if available.

Then Press **ENTER**.

NETWORK: E-MAIL

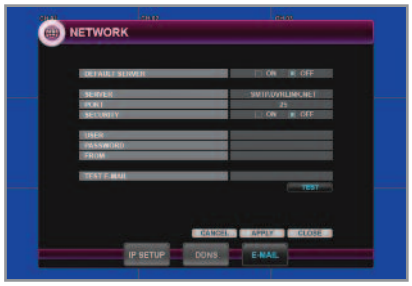

The VXH264D can be setup with two SMTP servers. This can be used as a back-up server, in case your primary server goes down. Or, send multiple emails to multiple accounts. e.g: Primary SMTP server sends emails from one account, and the Secondary SMTP Server sends email from a second account.

DEFAULT SERVER: Selects On or OFF. Default server is used if you do not have an outgoing e-mail server.

SERVER: The SMTP outbound email server that should be used to send email notifications.

PORT: The outbound email port number.

SECURITY: Set to OFF if the SERVER does not require a username and password to connect.

USER: Enter a username to identify the VXH264D in email messages.

PASSWORD: If SECURITY is set to ON, enter the password here.

FROM: Input an email address or text.

Please note: A USER must be entered for the mail function to operate correctly. The username must not contain spaces.

To set-up the event handling options, highlight EVENT/SENSOR and press **ENTER.**

EVENT / SENSOR: HDD EVENT

The VXH264D can monitor the hard drives and detect problems that may be developing.

S.M.A.R.T. ALARM: Enables SMART disk monitoring.

CHECK INTERVAL: Can be adjusted as desired.

DISK FULL EVENT: Can be set as ON or OFF.

EVENT / SENSOR: ALARM INPUT

Determines the behaviour of each of the 16 alarm inputs.

OPERATION: Alarm inputs can be enabled or disabled.

TYPE: Alarm inputs can be set as normally open or normally closed.

TEXT: Allows the indivdual alarm to be named. This name will appear in the log.

EVENT / SENSOR: ALARM OUT

Determines the behaviour and actions that will trigger each of the 16 alarm outputs or 4 relay outputs.

Behaviour settings
CHANNEL: Choose which alarm output to configure including relay outputs R1 to R4.

OPERATION: The selected alarm output can be enabled or disabled.

MODE: Can be either TRANSPARENT (the output is active only when the trigger criteria is present) or LATCHED. (the output is active for a set period of time after a trigger)

DURATION: In LATCHED mode, the time that the alarm output remains active after it has been triggered.

TYPE: Can be set to low (0V to +5V when activated) or high. (+5V to 0V when activated)

HDD EVENT: Determines whether a hard drive event triggers the alarm output.

Action settings
ALARM: Determines whether alarm inputs will trigger the alarm output.

VIDEO LOSS: Determines whether video loss on any of the selected channels will trigger the alarm output.

MOTION: Determines whether motion detection on any of the selected channels will trigger the alarm output.

Press **APPLY** to save settings.

EVENT / SENSOR: BUZZER OUT

Determines the behaviour and actions that will trigger the internal buzzer.

Behaviour settings
OPERATION: The internal buzzer can be enabled or disabled.

HDD EVENT: Determines whether a hard drive event sounds the buzzer.

MODE: Can be either TRANSPARENT (the buzzer sounds only when the trigger criteria is present) or LATCHED. (the buzzer sounds for a set period of time after the trigger)

DURATION: In LATCHED mode, the time that the buzzer sounds after it has been triggered.

Action settings
ALARM: Determines whether alarm inputs will sound the buzzer.

VIDEO LOSS: Determines whether video loss on any of the selected channels will sound the buzzer.

MOTION: Determines whether motion detection on any of the selected channels will sound the buzzer.

Press **APPLY** to save settings.

EVENT / SENSOR: EMAIL NOTI

Email settings must also be configured in MAIL and USER MANAGEMENT settings described on page 27.

Determines the behaviour and actions that will send an email to a remote user.

Behaviour settings
NOTIFICATION: Email notification can be turned ON or OFF. (When ON panic event will send emails)

SETUP CHANGE: Determines whether a setup change event sends an email.

HDD EVENT: Determines whether a hard drive event sends an email.

BOOTING EVENT: Determines whether system power-up event sends an email.

Action settings
ALARM: Determines whether alarm inputs will send an email.

VIDEO LOSS: Determines whether video loss on any of the selected channels will send an email.

MOTION: Determines whether motion detection on any of the selected channels will send an email.

Please note: Alarm Record must be scheduled under record settings in order to send alarm event emails.

EVENT / SENSOR: PTZ PRESET

Determines what event actions will send specified PTZ devices to specified presets.

CHANNEL: Select the camera channel that the desired PTZ device is connected to.

OPERATION: Set to ENABLE to make the PTZ device respond to the specified actions.

ALARM / PTZ PRESET: Tick the appropriate box and choose the desired preset number required. For example, to send the PTZ device to preset 57 when alarm input 5 is detected, tick the CH 5 box and enter PTZ PRESET 57.

VIDEO LOSS / PTZ PRESET: Tick the appropriate box and choose the desired preset number required. For example, to send the PTZ device to preset 32 when video loss is detected on channel 2, tick the CH 2 box and enter PTZ PRESET 32.

MOTION / PTZ PRESET: Tick the appropriate box and choose the desired preset number required. For example, to send the PTZ device to preset 9 when motion detection is detected on channel 4, tick the CH 4 box and select PTZ PRESET 9.

Notes: For an alarm input to call a preset, alarm recording must be enabled in the VXH264D record menu. For motion detection to call a preset, motion recording must be enabled in the VXH264D record menu.

DISK MANAGEMENT

Please note: When OVERWRITE option is set to OFF the recording time limit can not be set

To manage the internal hard drives, highlight DISK MANAGE and press **ENTER**.

RECORD TIME LIMIT: In certain circumstances, it may be necessary to limit the amount of footage stored on the VXH264D (to comply with data protection laws for example).

Recording can be limited to 12 hours, 1 day, 2 days, 3 days, 4 days, 5 days, 6 days, 1 week, 2 weeks, 3 weeks 1 month or 2 month. Once the VXH264D has this amount of footage stored, it will start to overwrite the earliest recorded footage.

OVERWRITE: When set to ON, the VXH264D will start overwriting the earliest recorded footage once the hard drive becomes full or record limit time is reached. When set to OFF, the VXH264D will stop recording when the disk becomes full. The status bar will show the percentage of the HDD that is full.

FORMAT: If necessary, all footage can be erased from the VXH264D using this option.

RECORD MENU

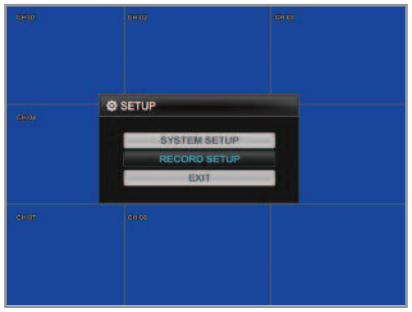

To set-up the recording behaviour of the VXH264D, highlight RECORD MENU and press **ENTER**.

RECORDING OPERATIONS

SCHEDULE MODE: Either DAILY (one schedule will apply to every day of the week) or WEEKLY (each day of the week has its own schedule).

PRE EVENT RECORDING TIME: When the VXH264D is not in continuous recording mode, this setting determines the amount of footage that is always recorded before an event occurs (motion detection, alarm input etc.)

POST EVENT RECORDING TIME: When the VXH264D is not in continuous recording mode, this setting determines the amount of footage that is always recorded after an event occurs (motion detection, alarm input etc.)

PANIC RECORDING: Can be set to MANUAL (panic recording continues indefinitely after it has been triggered until the **PANIC** button is pressed again), AUTO (when the **PANIC** button is pressed, the unit only records in panic mode for the time specified in PANIC RECORDING TIME) or DISABLE (panic recording is disabled).

PANIC RECORDING TIME: When PANIC RECORDING is set to AUTO itdetermines the amount of time the VXH264D records in panic mode before reverting back to standard recording mode.

INTENSIVE RECORDING MODE: When set to OFF, the VXH264D records as normal according to the CONTINUOUS / MOTION SETUP schedule. When set to ON, the VXH264D records according to the CONTINUOUS / MOTION SETUP schedule, but will automatically increase the recording frame rate or resolution to the highest amount possible on any channel that has motion detection.

RECORDING PRIORITY: When INTENSIVE RECORDING MODE is set to ON it determines whether the frame rate (FPS) or resolution (SIZE) is increased to the highest amount possible during motion detection.

NETWORK STREAMING MODE: Can be set to OFF so dual streaming is disabled. Set to MANUAL so the settings applied in NETWORK STREAMING take effect or set to AUTO, which will vary the FPS depending on your network.

CONTINUOUS / MOTION SETUP

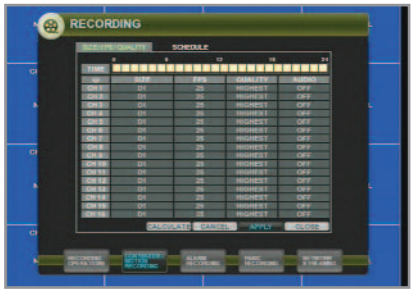

This setup screen allows the operator to configure scheduled and motion detection recording. There are 2 sections:

SIZE / FPS / QUALITY: Recording settings for each channel can be defined across a 24 hour period, in blocks (for example between 09:00 and 18:00) or for each individual hour. Note that when SCHEDULE MODE is set to WEEKLY, each day of the week can also be selected.

When any settings are changed, in the SIZE / FPS / QUALITY table the estimated recording time in days is displayed by pressing CALCULATE.

SCHEDULE: This section determines at what times the VXH264D will record and whether it is continuous recording or motion detection.

SIZE / FPS / QUALITY

To change SIZE / FPS / QUALITY settings, highlight CONTINUOUS / MOTION RECORDING and press **ENTER**. Ensure SIZE / FPS / QUALITY is highlighted in blue and press **ENTER** again.

The 24 hour time bar is highlighted in yellow.

Press **ENTER** to display the orange cursor.

The orange cursor shown represents one hour (in this case between 00:00 and 01:00). The table below the time bar shows the recording settings for this time period.

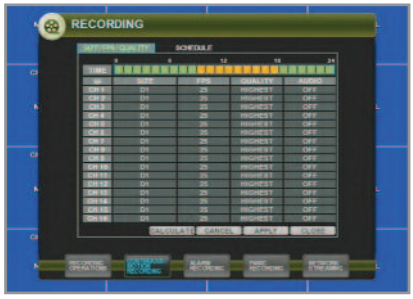

Example: To change the recording settings between 09:00 and 18:00:

Use the **CURSOR KEYS** to move the orange cursor to the 09:00 position and press **ENTER**.

Then use the **CURSOR KEYS** to stretch the orange cursor across to the 18:00 position.

Press **ENTER**. Recording settings for the selected time period are displayed.

RESOLUTION: Recording resolutions of CIF (352x288), 2 CIF(704x288) or D1 (704x576) can be selected for each channel.

FPS: Frame rates between 1 and 25 can be set for each channel.

QUALITY: Five different picture recording qualities can be set for each channel.

AUDIO: If audio devices are connected to the VXH264D then you can select them to be ON or OFF.

During playback, when a particular channel is selected in full screen, the assigned audio channel will be played back at the same time.

Adjust values as desired and select OK to finish and return to the parameter menu. Other time periods can be configured in the same manner.

Remember that if SCHEDULE MODE is set to WEEKLY, recording settings need to be changed for each day as well as for each particular time.

The default settings for all channels is D1 (704 x 576), 25FPS, HIGHEST quality.

Note: The VXH264D supports a maximum recording rate across all channels of 400 frames per second at D1 resolution. As settings are adjusted, the 'frames available' at bottom left displays the number of available frames still remaining and must always be zero or higher.

If, whilst changing recording settings, this figure becomes negative, recording resolutions and / or frame rates must be lowered to increase the 'frames available' value to zero or above.

SCHEDULE

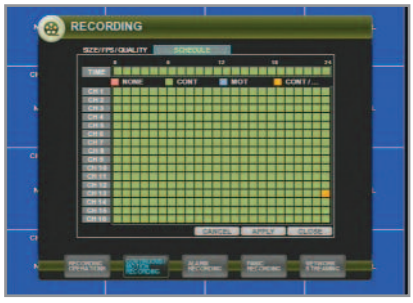

To change SCHEDULE settings, highlight CONTINUOUS/MOTION RECORDING and press **ENTER**. Use the **CURSOR KEYS** to highlight SCHEDULE and press **ENTER**.

The schedule box is highlighted in blue.

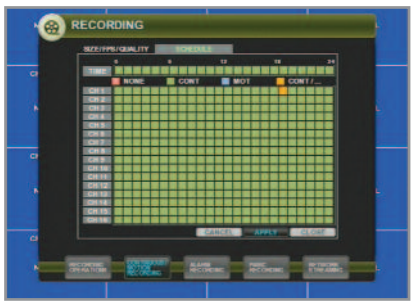

Press **ENTER** to display the yellow cursor.

Example: To set all channels to motion detection recording only between 18:00 and 00:00.

Use the **CURSOR KEYS** to move the orange cursor to the 18:00 position and press **ENTER**. This becomes the starting position.

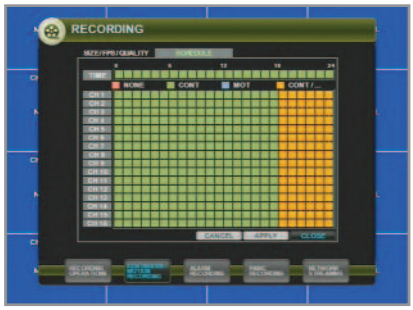

Use the **CURSOR KEYS** to stretch the orange cursor across and down to select all channels between 18:00 and 00:00.

SCHEDULE *continued*

Press **ENTER**.

Using the **CURSOR KEYS**, highlight MOTION and press **ENTER** again.

The small box next to motion will turn blue.

Then press OK.

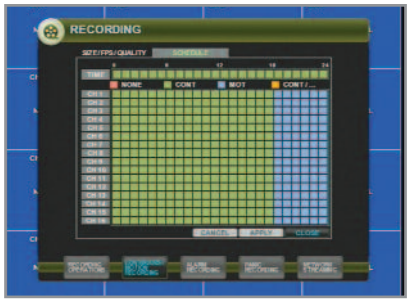

The selected area now displays a blue block for motion recording.

Repeat the above procedure to set different recording schedules for individual channels and time periods.

CONTINUOUS / MOTION SETUP

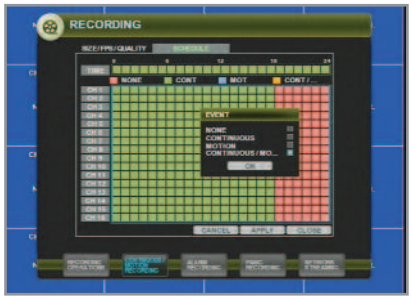

If intensive recording is defined, CONTINUOUS / MOTION must be enabled in the SCHEDULE setup to for it to work. Mixed continuous and motion recording is displayed on the SCHEDULE screen as an orange block.

The schedule screen has 4 coloured blocks to show the different recording modes.

Pink blocks: No scheduled or motion recording

Green blocks: The VXH264D will record continuously

Blue block: The VXH264D will only record when motion is detected

Orange block: The VXH264D is in intensive recording mode (Continuous and motion)

ALARM SETUP

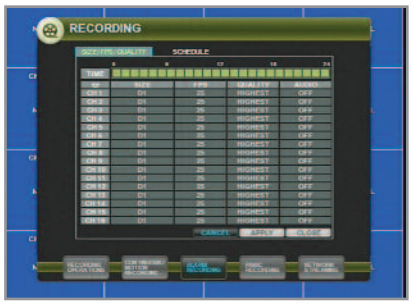

This setup screen allows the operator to configure alarm input activated recording.

SIZE / FPS / QUALITY: Recording settings for each channel can be defined across a 24 hour period, in blocks (for example between 09:00 and 18:00) or for each individual hour. Note that when SCHEDULE MODE is set to WEEKLY, each day of the week can also be selected.

SCHEDULE: This section determines at what times the VXH264D will monitor the alarm inputs and activate recording. This also determines when the VXH264D will send alarm event email notifications.

Please refer to Timer / motion setup on page 33 for details on setting up SIZE / FPS / QUALITY and SCHEDULE.

Alarm activated recording can be used in conjunction with continuous / motion recording. For example, the VXH264D could be configured to record continuously at a low frame rate (set in continuous / motion setup) and then increase to a higher frame rate during an alarm input (set in alarm setup).

PANIC SETUP

During panic recording mode, the VXH264D will override all other recording settings and record continuously on all channels at the settings configured here.

NETWORK STREAMING

Network streaming setup allows the user to lower the resolution, FPS and quality on the video stream being sent across the network.
This lowers bandwidth usage.

To change settings under **NETWORK STREAMING**, make sure the **NETWORK STREAMING MODE** is set to **MANUAL**. (Can be found under **RECORDING OPERATIONS**)

To change the parameters select any field on the NETWORK STREAMING table, this will then bring up a new menu, in which settings can be change.

Please note when Dual Streaming is set to **MANUAL**, the live feed from the DVR will be at CIF resolution only. The user then can change the FPS and Quality to their desired settings.

The VXH264D can be viewed on a remote connection either on a direct LAN connection or over the Internet, simply by using Internet Explorer.

The remote browser allows full live viewing of the VXH264D including telemetry control of PTZ cameras. In addition, playback, remote setup, audio talkback, local and backup.

CONNECT USING INTERNET EXPLORER

BEFORE CONNECTING
When using web browsers remotely, the Web Service Port and Net Client Port should be set-up correctly via the router by Port Forwarding. For more information regarding Port Forwarding please see APPENDIX B - Configuring a NETGEAR DG834 Router.

Refer to the manual of your Router for port forwarding settings.

WEB RA MINIMUM PC REQUIREMENT	
CPU	P4 3.0 or Higher
RAM	512MB or Higher
VGA	Geforce MS 400, Radeon 7500 or higher Gefore 8 series or higher
VGA MEMORY	64MB
MONITOR	1280X1024
OS	Windows XPSP2
IE VERSION	IE7.0 or higher
NETWORK	100Mbps
DIRECT X	V7.0 or higher

HOW TO CONNECT

Input the IP Address and Web Server port of the DVR in the Internet Explorer Address Bar.
e.g. http://192.168.2.19:8080 (Web Port :8080)

If you do not have a fixed IP address and are using the DDNS service, input the URL as below.
e.g. http://1234.dvrlink.net:8080 (Web Port :8080)

Please replace “1234” with the default MAC address of the DVR (located under System Information), or your chosen DDNS host name.

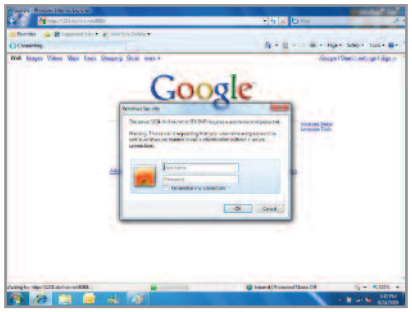

A security window will then appear asking for Log In credentials.

Default ID and password are ‘ADMIN’ &’1234’.

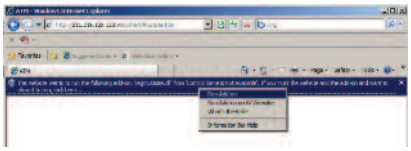

You will need to install Active-X, click Run Add-on as shown in the image.

Please note, you will not have to repeat this step each time you connect remotely, unless a different computer is used.

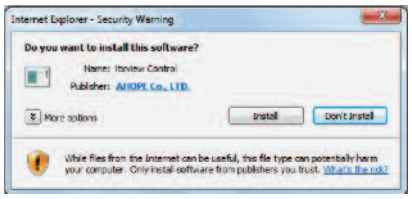
Internet Explorer - Security Warning
Do you want to install this software?
Name: Iboview Control
Publisher: AIHOPE Co., LTD.
More options
Install
Don't Install
While files from the Internet can be useful, this file type can potentially harm your computer. Only install software from publishers you trust. What's the risk?

In case you are unable to install active-X, you will need to check the security options regarding activeX, on Internet Explorer security menu. To check security options, open Internet Explorer, Click Tools located on the menu bar at the top, then click Internet options. A new window will then appear Click Security tab then Custom level…

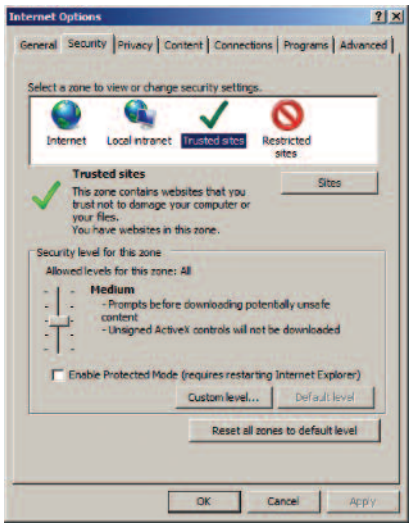

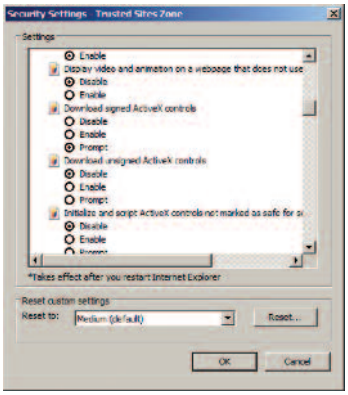

Select Enable for all ActiveX related options.

(Including, Download signed ActiveX control, Download unsigned ActiveX control….)

REMOTE CLIENT CONTROLS

After successful connection, the remote client displays the current live view from the VXH264D.

For each channel, the title, time / date and resolution are displayed.

LIVE DISPLAY MODES

Use the **DISPLAY** buttons to switch from a single, quad, 8, 9 or 16 split display.

To sequence, select the screen you require (single or multi mode) and click the **SEQUENCE** button. Click **SEQUENCE** again to to move to the next camera.

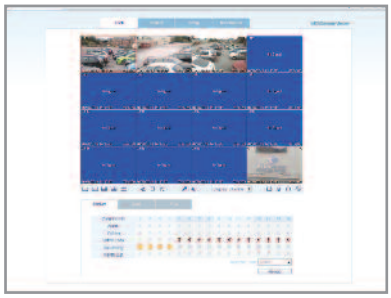

The **MANUAL SWITCH** button shifts the positions of all channels by one place. For example, the following displays shows a 4 channel VXH264D in 16 screen mode.

Clicking **MANUAL SWITCH** has moved all channels back by one position.

By clicking the **FULL SCREEN** button, the live display is shown in full screen without any of the remote client controls.

To return to normal viewing, press the ESC key or double click the right mouse click on any part of the screen.

To quickly select a particular channel, use the DISPLAY CHANNEL drop down box and click the channel you want to view.

AUDIO MONITORING

During a remote client session, the operator can monitor audio connected to the VXH264D.

Click the **AUDIO** button to toggle live audio on or off.

Suitable speakers must be connected to the PC for audio monitoring to function.

AUDIO TALKBACK

During a remote client session, the operator can 'talkback' to the VXH264D. During talkback, audio is routed through the **AUDIO OUT** connector on the rear of the VXH264D.

To talkback, click and hold the **TALKBACK** button and speak normally in to the microphone.

SAVING TO AVI FILE

The operator can choose to record all channels currently being displayed on the live view directly to the local PC hard drive.

Click the button to immediately start recording.

Click the button to end recording.

By pressing the printer symbol you can print the current view.

By pressing the snapshot symbol you can create a JPEG still image of the selected camera image.

By pressing the setup symbol you can set-up the archive setting, such as the location. The archive footage/snapshots will be stored to a local PC.

STATUS

Internet explorer allows the user to quickly see the current status of all the cameras on the recorder.

Under each channel number is a display that indicates:

ALARM: If there is currently an alarm activation.

MOTION: If the camera is detecting motion.

VIDEO / LOSS: If there is a video loss.

RECORDING: Displays the current recording mode.
(C : Continuous, M: Motion, A: Alarm, P: Panic Record)

ALARM OUT: Show any alarm out functions being used.

The status refresh time can be selected between 3 & 10 seconds.

LOG

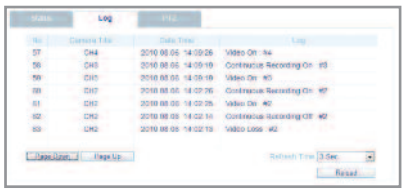

Internet explorer allows the remote user to view the log from the DVR

PTZ

Internet explorer allows all telemetry control of devices connected to the VXH264D, provided that the correct user authority has been set-up.

Click the appropriate channel and use the on screen directional buttons to control pan & tilt movements. Use the - / + keys next to the Focus, Zoom and Iris buttons to control these functions if available on the camera.

PRESETS

Presets can be programmed and called remotely using the SET and RUN buttons.

Example: To start pattern tour 1 running on a VHSD-770EXT speed dome, select preset 131 from the drop down list and click RUN.

Example: To program preset position 85, position the speed dome using the TELEMETRY controls, select preset 85 and click SET.

Telemetry control also allows remote setup of many telemetry devices. For example, to access the setup menu of the VHSD-770EXT speed dome, RUN preset 95 and then use the telemetry direction and focus + (to enter) and – (to exit) controls to navigate the speed dome menu.

REMOTE CLIENT PLAYBACK

Click the search tab to switch to search mode.

The timeline at the bottom of the display shows a graphical overview of recorded footage for a particular day.

Different colour blocks represent different types of recording.

ORANGE: Continuous

PINK: Panic

PURPLE: Alarm

BLUE: Motion

CYAN: PRE

DATE: Choose the required date by selection drop down box and select the date required.

TIME: Either use the same method again to select the time or drag the blue time bar along the timeline. When sliding this time bar you will notice the time changes in the boxes above.

Click PLAY to begin playback from the selected date and time.

CONTROLLING PLAYBACK

During playback at anytime click to pause the footage. Click again to resume playback.

Footage can be played in reverse by clicking

Then to return playing back the footage normally click

Fast Forward and Rewind can be clicked to speed up playback.

AUDIO MONITORING

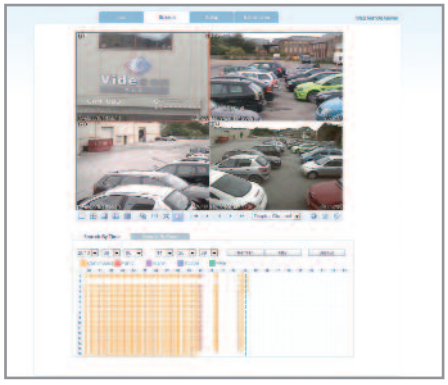

During playback click the **AUDIO** button to toggle audio on or off.

Please note: Audio can only be heard when a single channel view is displayed.

BACKUP

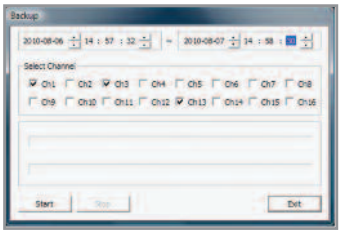

Pre-recorded footage on a VXH264D can be archived to the local PC hard disk or removable media depending on where the save destination is set.

Click the BACKUP button to show the archiving screen.

Choose start time, end time and which channels to archive.

Click START to begin archiving data to the PC hard drive or removable media.

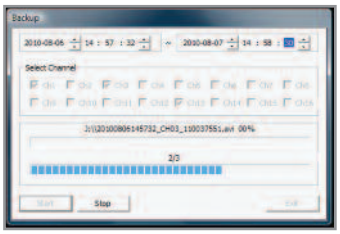

The Archive screen shows the current status of the archiving process by showing a blue progress bar.

The archived file format is AVI, this can be played on windows media player or via the VXH backup player.

The default folder location is C:\SaveFolder.

SEARCH BY EVENT

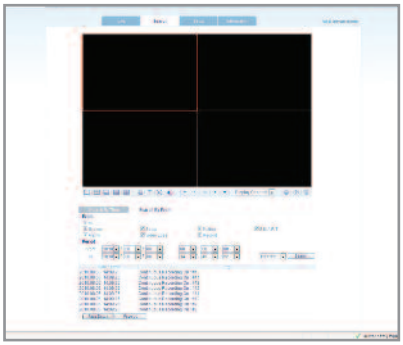

To search for an event and to playback the recorded footage, click **SEARCH BY EVENT**.

Choose the ‘Start time’ and ‘End time’. Select which events to include in the search and click ‘Search’.

The event log for the selected time period is displayed below, the ordered can be changed from nearest to farthest.

By clicking any of the events, the recorded footage will begin playing automatically.

PRINT AN IMAGE

During playback, a still image can be printed on the local PC printer by clicking the **PRINT** button.

The printed image is in the same style as the currently selected screen display, for example, quad screen.

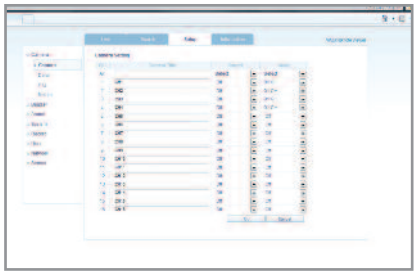

Only authorised users or ADMIN users can configure a VXH264D remotely. With the exception of network settings and certain display options, any of the VXH264D settings can be changed.

ENTERING SETUP

Click the **SETUP** tab to switch to the setup menu.

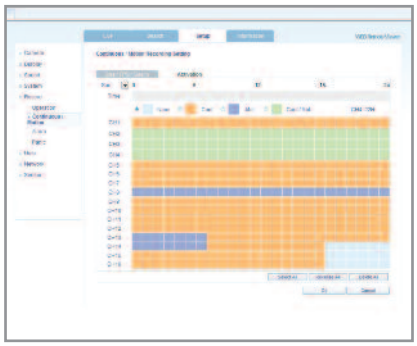

The remote setup screen is displayed and the VXH264D settings can be changed as necessary using the main menu selection on the left hand side.

Click OK to save all changes made to each main menu page.

A completed message appears to confirm the changes have been made.

Any changes made will take effect immediately.

CONNECTING YOUR VXH264D TO YOUR iPHONE/ANDROID

To connect your DVR to an iPhone/Android, you will need to download the iPhone/Andriod app, and also have the following information handy.

- IP address of the DVR
- HTTP Port number (by default this is 8080)
- RTSP Port number (by default this is 6400)
- Username
- Password

All of the above information can be found on the DVR, and will have been used when setting up the DVR on the network.

DOWNLOADING THE APP

You can download the app via the App Store, by searching for "VXH", or by using the QR codes below if you have a QR Code Reader on your device.

There are two versions of the app - "VXH264Pro" and "VXH264Lite" If you are on an iPad, you will need to use VXH264Lite. If you are on an iPhone, VXH264Pro is recommended.

To download the APP for an Android device search the Android Market for 'VXH264', or use the QR codes below

iPhone

VXH264Lite VXH264Pro

Andriod

VXH264Lite VXH264Pro

* Please Note: Screen shots used are from and iPhone

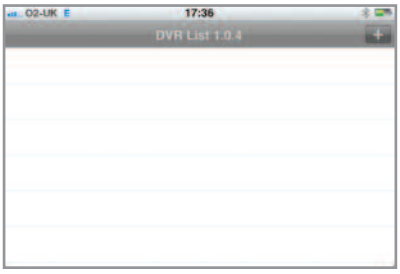

iPhone
Once you have installed the app, open it and you will see this screen. To add your first DVR connection, press the '+' button in the top
right hand corner.

Andriod
On an Android device press the MENU button. The 'Add Connection'.

iPhone
Next enter a name in the box headed "Server name" - you can give this connection any name you like - and then hit 'Save' in the top right corner.

Andriod
Enter the 'Server Name' - you can give this connection any name you like.

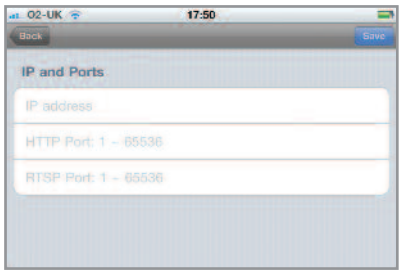

iPhone
Next enter your IP address, HTTP Port number and RTSP Port number. Then, hit 'Save' in the top right corner.

Andriod
Next enter your URL (IP) address, HTTP Port and RTSP Port Number.

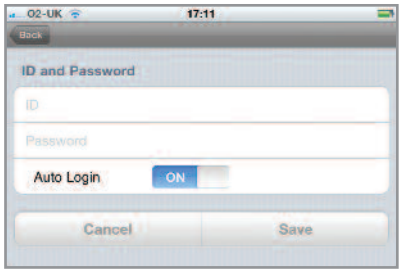

iPhone

Next you will be asked for your username and password. These details all need to be the same as the ones you used to connect the DVR to the broadband router.

Enter your username and password and hit 'Save' at the bottom of the screen. If you select 'Yes' for Auto login, you will be able to connect to your DVR when you open the app, without entering your username and password each time.

You will now return to the DVR Connections screen and the name of the connection you have just saved will appear.

Touch the name of the connection you wish to view - you will now be taken to a single screen live view. (If you have not enabled Auto Login you will be asked for your username and password first). The screenshot on the left is a sample of what you will see.

Tap the screen to bring up the menus. You'll then see a view like this. Touch the quad screen option (circled) to switch to quad screen view.

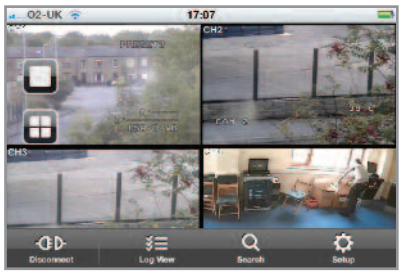

You will then see footage in quad screen view. When in quad screen view, touching and holding any one of the camera views will take you to a single view screen for that camera.

Using the icons at the bottom of the screen, you can also change the DVR settings, view the system log and more (applies to the Pro version only).

* Please Note: Screen shots used are from and iPhone

The VXH264D can be viewed remotely via smart phones such as the iPhone or Andriod.

iPhone
Select the Safari browser.

Andriod
Select the Web browser.

Select the web browser on the Smart Phone menu.

iPhone
Enter the IP address or URL to connect.
And Click the [GO] button.

Andriod
Enter the IP address or URL to connect.
And press the Enter button.

Enter the IP address or URL into the web browser address bar

Example
http:// 192.168.2.19:8080 Or **http:// 1234.dvrlink.net:8080**

Please replace 1234 with the default MAC address of the DVR and press ENTER / GO (depending on type of phone used).

The Smart Phone remote log-in page will appear. Enter the Username & Password to view the image from the DVR.

iPhone

Android

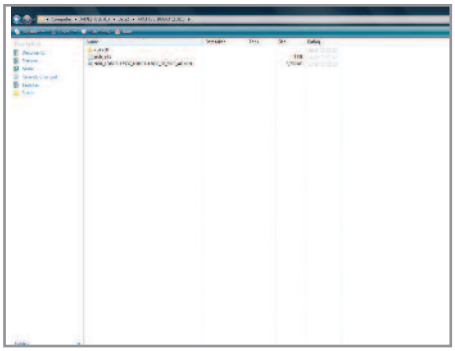

After footage has been archived from a VXH264D, it can be reviewed on a PC system.

Insert the backup CD/DVD or USB stick in the PC and view the contents using Windows Explorer.

The following files are included in the backup:

Arch_info: This file contains detailed information about the archive set. Double click to view it.

Ch##: An AVI video file containing the archive footage for a single channel. Depending on the archive, there will be upto 16 AVI files listed.

BackupPlayer.exe. This is the playback software necessary to view the archive files correctly.

Setup.exe: Installs the IMM4 codec. This is required if the user chooses to play back archive files using Windows Media Player.

Other files in the player folder, i.e bplayer, bplayer_logo, comfig, ijl15.all, LANG_ENG are not used.

BACKUP PLAYER

To view archives backed up from a VXH264D, double click the Backupplayer application located in the PLAYER folder.

Click to choose which archive file to playback.

Playback of the archive file begins.

The controls under the display can be used to adjust playback direction and speed.

Note: VXH264D archive files can also be viewed using Windows Media player but no on screen information (such as time and date) is displayed.

For this reason, it is always recommended that Backupplayer is used to view archive files.

Archive set file names

When a backup is created on the VXH264D, a folder is first created on the backup device so that the operator can easily identify the archive set at a later stage.

For example the folder, F:\ARCHIVE_100803_115810 is an archive set that was created on 3rd August 2010 at 11:58:10.

Each individual archive file is also named for easy identification.

For example, US_ch01_10803115532_10803115632_00_8MB_admin is a backup of channel 1 from 11:55 on 3rd August 2010 to 11:56 on 3rd August 2010 with a file size of 8MB created by an ADMIN user.

BACKUP PLAYER

During playback, a still image can be save to the local PC hard disk by clicking the **SNAPSHOT** button located in the top left corner.

Specify the file location, file name and choose BMP or JPG format. Click 'Save'.

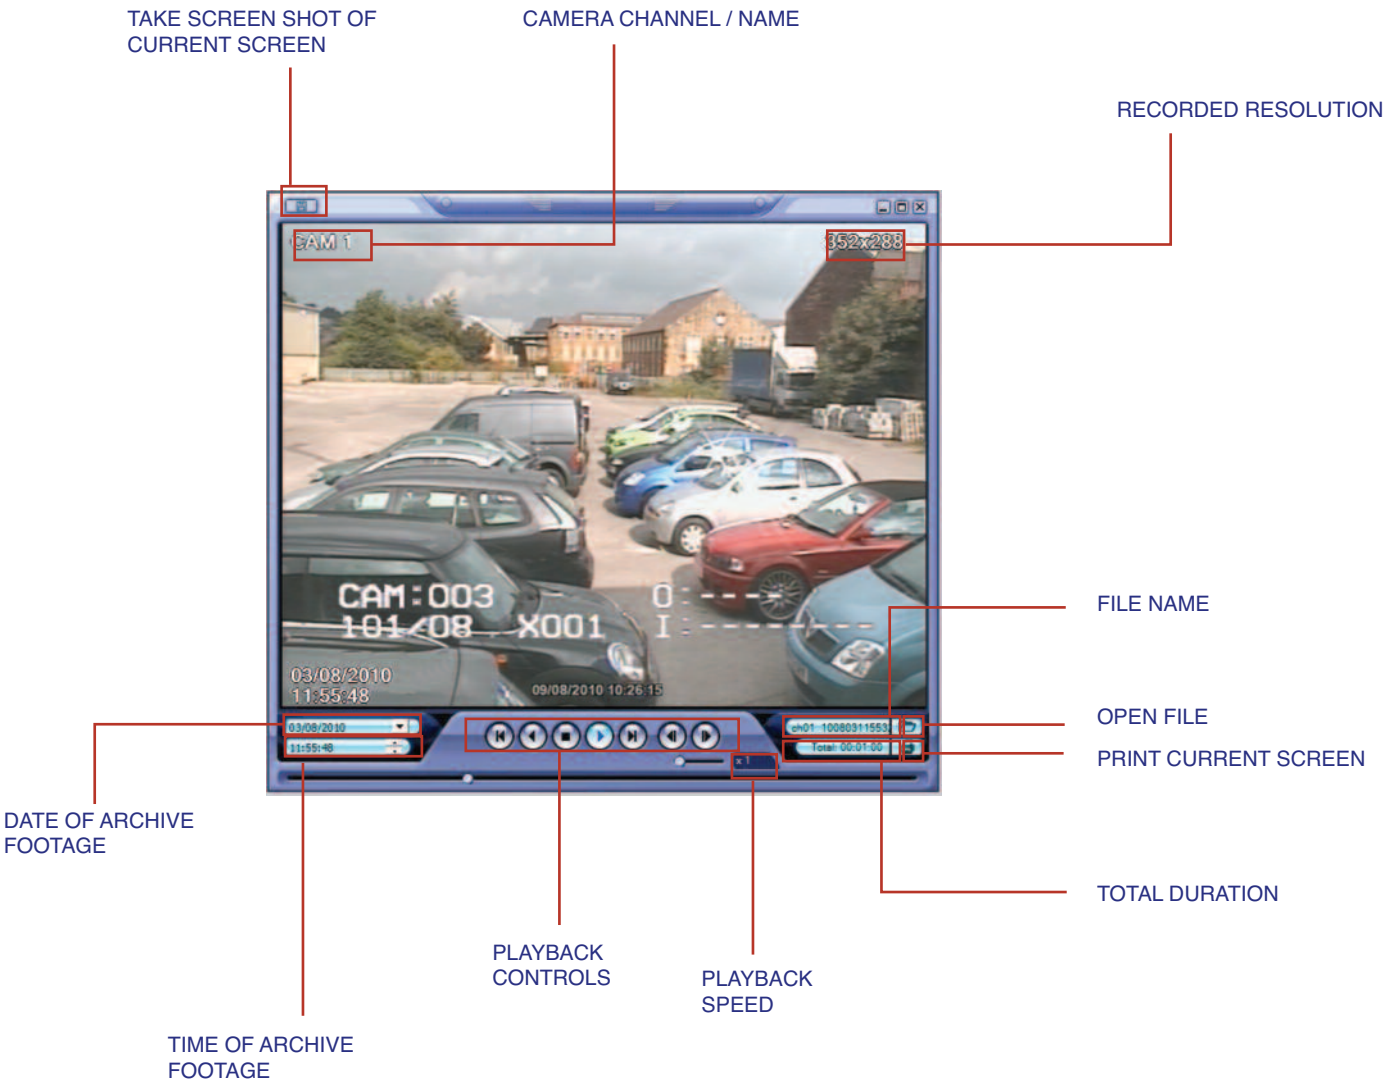

REQUIREMENTS

1. Netgear DG834 router

2. A Laptop or PC to configure the DG834

3. An Internet connection and all required login details (username and password provided by your ISP)

SETUP STEPS FOR INTERNET CONNECTION

1. The DG834 has a default IP address of 192.168.0.1, so configure your laptop or PC with an IP address of 192.168.0.2 and gateway of 192.168.0.1 and connect to the DG834 using the standard CAT-5 patch lead supplied with the router.

2. Open Internet Explorer and enter http://192.168.0.1 to connect to the router. When prompted, enter user name of 'admin' and password 'password'.

3. If the DG834 has never been set-up before, it will prompt whether you wish to use the setup wizard – do not do this.

4. Choose 'Basic Settings' from the menu on the left. Select yes for 'Does your internet connection require a login' and enter your username and password as provided by your ISP. Other information required on this screen can be left at defaults. Apply these settings and then verify that you now have internet access from the PC / Laptop.

SETUP STEPS FOR CONNECTING A VXH264D LOCALLY

1. Configure the VXH264D (refer to page 29 for details) so that it has a unique IP address, which is in the same range as the router and PC/Laptop. For example, in this case choose 192.168.0.3. Set the gateway IP on the DVR to the router's IP address of 192.168.0.1. Note that the default port number is 6200.

2. Connect the VXH264D to the router using a standard CAT-5 patch lead and verify that it can be 'pinged' from the PC as follows:
   a) To open a command prompt using Windows XP use the following sequence:
      START-RUN - Type in CMD - OK
      For Windows Vista / 7 users:
      START - Type in CMD -Press Enter
   b) At the command prompt, type 'PING 192.168.0.3'. If you see 4 lines saying 'reply from 192.168.0.3: ……..' then the VXH264D is recognised on the local network. If not, work through the above steps again, but also check that the CAT-5 patch lead is OK.

3. At this point, the connection to the VXH264D can be tested locally.

SETUP STEPS TO ALLOW REMOTE VIEWING OVER BROADBAND

BASIC PRINCIPLES

Imagine the Netgear DG834 is split in to two halves - one half is the private side which serves the local network. This 'half' of the router has its own IP address (typically 192.168.0.1) and other devices (PCs, Laptops, VXH264D etc.) that are connected to it will all have a unique IP address of the form 192.168.0.XXX.

Because this is a private network, it cannot be accessed directly from the outside world.

The other imaginary half of the DG834G is the public side - it also has its own IP address which is allocated to you by your ISP and can either be static (it never changes) or dynamic (your ISP could change it at any time). Because this is a public network, in theory, anyone from the outside world who knows your public IP address can access the router and your private network. But, because the router has a security firewall built in, incoming traffic is severely limited to prevent this.

For this reason, you need to configure the DG834 so that incoming traffic intended for the VXH264D is correctly routed instead of being blocked - this is known as port forwarding.

You will notice on the VXH264D that in the network setup section, there is also two port numbers. These could technically be any value over 1030 but the default value on the VXH264D is acceptable.

In this case, the VXH264D default port values are 8080 and 554 so two rules need creating on the DG834 that channels all traffic coming in on port 8080 and 554 to the VXH264D.

APPENDIX B: CONFIGURING A NETGEAR DG384 ROUTER FOR USE WITH VXH264D

SETTING-UP PORT FORWARDING

This section assumes that you have already established a successful connection locally. Log-on to the DG834 and select 'Services' from the menu.

Click 'Add Custom Service' and enter the following values:

Name: VXH264D (or any other name of your choice)
Type: TCP
Start Port: 8080
Finish port: 8080

And click 'Apply'

Then, create a firewall rule as follows:
Select 'Firewall Rules' from the menu. Under the inbound services, click 'Add' and enter the following:

Service: VXH264D (TCP:8080) – This is the service you created earlier.

Action: Leave at 'ALLOW always'.

Send to LAN server: 192.168.0.3 - This is the IP address of the VXH264D.

Wan Users and Log settings can be left unchanged.

And click 'apply' to add the new rule.

Repeat this process for the RTSP Port. (554)

Once the firewall rules are set-up, anybody should be able to access the VXH264D from the outside world, as long as they are using the correct software and correct log in details.

To configure the software, the IP address is the public static IP address of your router and the port number in this case will be 8080. The username and password must match those set-up on the VXH264D.

SETTING UP MULTIPLE VXH264Ds ON ONE ROUTER

The setup steps in this case are identical but you will need to create a separate service and firewall rule for each VXH264D connected. Note also that each VXH264D must have a unique port setting as well as a unique IP address.

Example – 2 VXH264Ds connected to a router

1st VXH264D settings
IP address: 192.168.0.3
Port: 8080
RTSP: 554
Gateway: 192.168.0.1

On the DG834, configure a service on port 8080 and a firewall rule to direct this service to 192.168.0.3

2nd VXH264D settings:
IP address: 192.168.0.4
Port: 8081
RTSP: 6401
Gateway: 192.168.0.1

On the DG834, configure a service on port 8081 and a firewall rule to direct this service to 192.168.0.4

The remote client software can then be configured with one connection group containing two VXH264D connections to match the above and then both VXH264Ds can be accessed remotely at the same time.

Note: If connecting locally over a LAN, the unique 192.168.0.XXX IP address for each VXH264D has to be entered. If connecting over broadband, the same public IP address is entered for both VXH264Ds – port forwarding on the router takes care of the rest.

USING DDNS TO CONNECT

DDNS (Dynamic Domain Name Server) is generally used when your ISP provides you with a dynamic public IP address. The problem with a dynamic IP address is that because it can change regularly, any remote users that need to connect to the VXH264D do not know what IP address to enter in the remote client!

Using DDNS solves this problem. When a VXH264D is correctly configured to use DDNS, it regularly interrogates the router and sends the current public IP address to a 3rd party database. The VXH264D also sends its MAC address, which is unique.

Before using DDNS, the VXH264D must be set up correctly by following the steps on page 37 and verifying that a local connection can be made.

In addition, the following must be configured in the VXH264D NETWORK setup menu (page 29)

DDNS - enabled

1st DNS server - must be the local IP address of the router
2nd DNS server - must be the IP address of the ISP's 2nd DNS server
DDNS server - leave set as DDNS.DVRLINK.NET

Note: if the ISP's DNS servers are not known, they can be identified as follows:

A) To open a command prompt using Windows XP use the following sequence:
START-RUN - Type in CMD - OK
For Windows Vista / 7 users:
START - Type in CMD -Press Enter
B) At the command prompt, type 'IPCONFIG /ALL' and press ENTER. The ISP's DNS servers are listed at the bottom of the information screen. If only one server is listed, enter this in the VXH264D 1st DNS server, and leave the 2nd DNS server as default

Finally, make a note of the VXH264D's unique MAC address - this can be found in the SYSTEM MANAGEMENT part of the VXH264D setup (page 25).

For example, if the MAC address is 00-11-5F-00-9A-33, the following should be entered instead of an IP address when configuring a VXH264D connection group:

00115f009a33.dvrlink.net

Note: the entry should be MAC address.dvrlink.net, not MAC address.ddns.dvrlink.net

When the remote client initiates a connection, it interrogates dvrlink.net for the actual public IP address that corresponds to the MAC address. It then uses the resulting IP address to connect to the VXH264D.

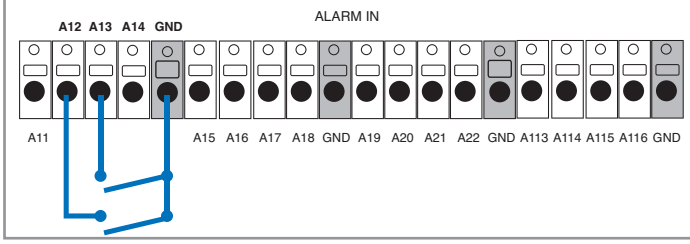

ALARM INPUTS

Connect voltage free contacts from PIRs and beam break detectors etc. to the 'GND' terminal and 'AIXX' terminals of choice.

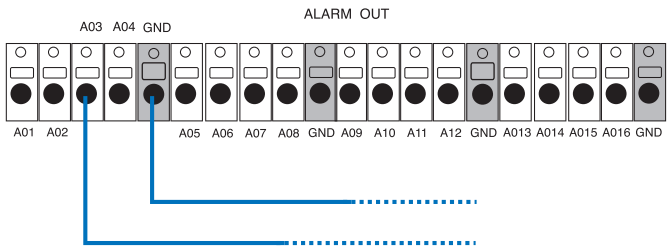

ALARM OUTPUTS

Connect the 'GND' terminal and 'AOXX' terminal of choice to standard alarm inputs on other equipment, E.g. phone diallers and alarm panels etc.

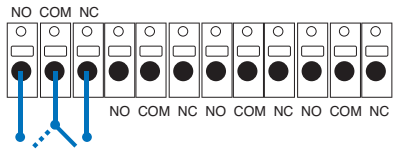

RELAY OUTPUT

Connect the 'COM' and 'NO' or 'NC' terminal of choice to activate low voltage sounders, strobes etc.

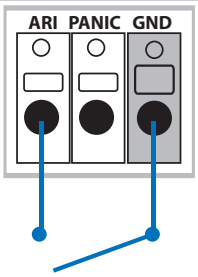

ALARM RESET

Connect an external push button switch to the 'ARI' and 'GND' terminals. Pushing the switch will reset all system alarms.

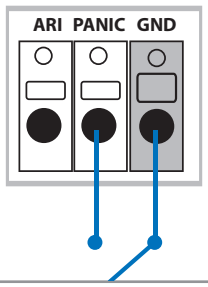

PANIC

Connect an external push button switch to the 'Panic' and 'GND' terminals. Pushing the switch will activate the panic recording function.

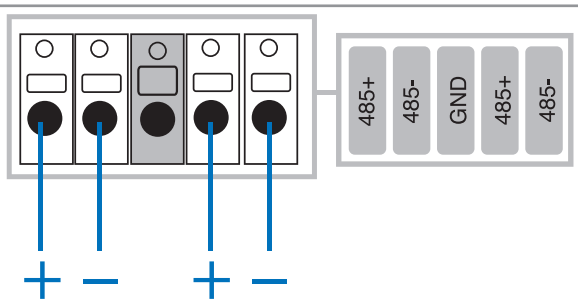

TELEMETRY, VA-KBDPRO+ AND POS

Connect RS485+ to the '+' or 'A' terminal of any attached telemetry devices or VA-KBDPRO+ keyboard. Connect RS485- to the '-' or 'B' terminals, on the lefthand side RS485 connection on.

POS: Connect your till system to the righthand side RS485 connection

MODEL		VXH264D-16
Operation	Genuine Pentaplex	Simultaneous recording, playback, network live view, network playback, network remote set-up. Frame rate unaffected
Video in	Channels	16
	Connection	BNC, 1.0Vpp composite 75ohm unbalanced
	Loop through	BNC, 1.0Vpp composite 75ohm unbalanced, auto-termination
Audio in	Channels	4
	Connection	RCA, line level unbalanced
Main displays	BNC	1.0Vpp composite 75ohm unbalanced
	VGA	15 pin D-SUB 1280 x 1024 @ 60Hz
	S-Video	4 pin mini din Y/C
	HDMI	Single HDMI Socket. Max. 1920 x 1080p @ 50Hz
	Screen display modes	1, 4, 6 (1+5), 8 (1+7), 9, 16
	Sequence	Adjustable dwell time, user-defined sequences
	Digital zoom	Between 2x ~ 14x
Spot displays	Channels	4, fully programmable
	Connection	BNC, 1.0Vpp composite 75ohm unbalanced
	Display mode	Full screen sequence, adjustable dwell-time
Audio out	Channels	1
	Connection	RCA, line level unbalanced
External alarm	Inputs	16, NO or NC common ground
	Outputs	16, high (+5V) or low (0V) selectable,common ground + 4 Relay Out
User interface	On-screen display	GUI
	Control	Mouse, Front panel, IR Remote and / or VA-KBDPRO+ PTZ Keyboard
Recording	Video CODEC	H.264
	Resolution options for each channel	CIF (352 x 288), 2 CIF (704 x 288), D1 (704 x 576)
	Maximum total frame rate	400 FPS (D1)
	Image quality	Super, Highest, High, Standard, Low
	Pre-event recording	5 seconds max
	Recording modes	Schedule / motion detection / alarm / panic
	Frame rate options for each channel	25 - 13 - 7 - 3 - 2 - 1
	Schedule	Per channel, per hour, per day / week
	Configurable recording time limits	12 hours, 1 day, 2 days, 3 days, 4 days, 5 days, 6 days, 1 week, 2 weeks, 3 weeks, 1 month, 2 month
	Audio	Audio inputs independently assigned to each channel
	Motion detection	16 x 16 selectable grid with 10 levels of sensitivity
	Covert recording	Yes, selectable by channel
	Camera title	8 characters (max)
Playback	Speed	Forward / reverse. 1x, 2x, 4x, 8x, 16x, 32x, 64x
	Control	Front panel buttons and Jog / Shuttle ring, mouse, IR Remote
	Search method	Calendar / timeline, event log, instant playback, POS event
	Split screen display modes	1, 4, 9, 16
	Audio synchronization	Yes, any frame rate
Archiving	Storage	CD-R (DVD±R option), USB Memory stick, Network, FTP
	Format	Watermarked AVI
	Archive data	Independent channel selection, back-up log, event log
Time	Time zone	Worldwide, selectable
	DST	Yes
	Time synchronisation	Internet time server
PTZ	RS-485	Multi-protocol, baud rate and speed control for each channel
POS		
System	Watchdog	Yes
	Abnormal shutdown detection	Yes, with system auto recovery
	HDD Error detection	Yes, SMART monitoring
	System data backup / restore	Yes, USB memory stick
Network	Connection	RJ45
	Simultaneous connections	4 (max)
	DHCP	Yes
	DDNS	Yes
	Two way network audio	Yes
	Bandwidth management	Yes
Remote Access	I.E Browser	Yes
	Smart Phone	Yes
	Remote configuration	Yes
	Remote PTZ control	Yes
	Email event notification	Yes
Storage	Maximum Capacity	Currently 8TB
	Storage	4 x HDD maximum
	Recording options	Stop when full / overwrite
Event handling	Source	Alarm in, motion detection, video loss, HDD error, Panic
	Action	Record, alarm out, email notification, log, remote client pop-up, buzzer, full screen pop-up
Security	User levels	ADMIN, MANAGER*, USER* (*Configurable)
	Key Lock	Yes, password protected
Physical	Dimensions	428mm(w) x 421mm(d) x 93mm(h)
	Weight	4.8kg (without HDD)

Concept Pro